



# Powerlynk Lynks 6kW SM6.0kWPLL



## USER MANUAL SA

[www.sunsynkmobile.com](http://www.sunsynkmobile.com) / [sales@sunsynkmobile.com](mailto:sales@sunsynkmobile.com)

# INDEX

---

|   |           |  |           |
|---|-----------|--|-----------|
| <b>SAFETY</b>                             | <b>3</b>  | <b>BATTERY COMPATIBILITY</b>               | <b>20</b> |
| General Safety Information                | 3         |  |           |
| Safety Instructions                       | 3         |  |           |
| Symbols in the Manual                     | 4         | <b>OPERATION</b>                           | <b>21</b> |
| Symbols in the Product                    | 4         | System Flow                                | 21        |
| Product Disposal                          | 5         | Switching On / Off                         | 22        |
|   |           | Home Screen                                | 22        |
|   |           | Home Settings                              | 23        |
| <b>PRODUCT INTRODUCTION</b>               | <b>6</b>  | Basic Settings                             | 23        |
|   |           | Language Settings                          | 24        |
|   |           | Grid Mode Settings                         | 25        |
| <b>BOX CONTENTS</b>                       | <b>6</b>  | Work Mode Settings                         | 26        |
|   |           | System Logger                              | 27        |
|   |           | Advance Settings                           | 28        |
| <b>TECHNICAL SPECIFICATION</b>            | <b>7</b>  | Grid Settings                              | 29        |
|   |           | Battery Settings                           | 29        |
|   |           | System Settings                            | 30        |
| <b>INSTALLATION</b>                       | <b>9</b>  | Export Control                             | 31        |
| Selecting the Mounting Area               | 9         | Export Sell to Grid                        | 31        |
| Mounting the Inverter                     | 10        | Charge From Main                           | 33        |
| Battery Cable Connection                  | 11        | Earth Neutral Bond                         | 33        |
| Flow Diagram                              | 12        | Night Power Saving                         | 34        |
| Connecting to the Mains / Grid            | 12        | Setting Details                            | 35        |
| Wiring the PV Panels                      | 12        | Fault Codes                                | 38        |
| CT Coil and Load Power Settings           | 13        |  |           |
| Parallel Operation                        | 14        | <b>COMMISSIONING</b>                       | <b>40</b> |
| External Battery and Parallel Connections | 15        | Startup / Shutdown Procedure               | 40        |
| Load Connection                           | 17        | Information for Commissioning the Inverter | 41        |
| Grid Connection                           | 17        | GFDI Fault                                 | 42        |
| Solar Connection                          | 18        |  |           |
|   |           | <b>MAINTENANCE</b>                         | <b>42</b> |
| <b>LCD DISPLAY SCREEN</b>                 | <b>19</b> |  |           |
|   |           | <b>APPENDIX A</b>                          | <b>42</b> |
| <b>FACTORY SETTINGS</b>                   | <b>20</b> |  |           |

# SAFETY

---

## General Safety Information

- This device should only be used in accordance with the instructions within this manual and in compliance with local, regional and national laws and regulations. Only allow this device to be installed, operated, maintained or repaired by other person(s) who have also read and understood this manual. Ensure the manual is included with this device should it be passed to a third party.
- **DO NOT** allow minors, untrained personnel, or person(s) suffering from a physical or mental impairment that would affect their ability to follow this manual, install, maintain or repair this device.
- Any untrained personnel who might get near this device while it is in operation **MUST** be informed that it is dangerous and instructed carefully on how to avoid injury.

## Safety Instructions



### WARNING

#### **HIGH LIFE RISK DUE TO FIRE OR ELECTROCUTION.**

The Lynks 6kW can only be installed by a qualified licensed electrical contractor. This is not a DIY product.

#### Ensure to follow the safety warnings listed below:

- Be sure to read this manual thoroughly before installation.
- Do not attempt to install the inverter by yourself. Installation work must be carried out in compliance with national wiring standards and by suitably qualified personnel only.
- Do not turn on the power until all installation work is complete.
- Do not disassemble the inverter. If you need to repair or maintenance, contact a professional service centre.
- Always use an individual power supply line protected by a circuit breaker and operating on all wires with a distance between contacts of at least 3mm for this unit.
- The unit must be correctly grounded and the supply line must be equipped with a suitable breaker and RCD to protect people.
- Disconnect all wires before performing any maintenance or cleaning to reduce the risk of electric shock.
- The unit is not explosion-proof, so it should not be installed in an explosive atmosphere.
- Never touch electrical components immediately after the power supply has been turned off since the system can still have residual energy, so electric shock may occur. Therefore, after turning off the power, always wait 5 minutes before touching electrical components.
- This unit contains no user-serviceable parts. Always consult an authorised contractor for repairs.






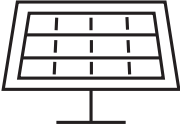




 
 

 
 




## Symbols in the Manual



This symbol indicates information that if ignored, could result in personal injury, physical damage or even death due to incorrect handling.

## Symbols in the Product

|  |  |  |  |
|--|--|--|--|
|  | Risk of burn.  |  | Keep the equipment well-ventilated.  |
|  | Risk of electric shock.<br>DO NOT touch the terminal or remove the shell within 5 minutes after disconnecting all power. |  | The UKCA marking is used for products placed on the market in Great Britain (England, Scotland and Wales). The UKCA marking applies to most products for which the CE marking could be used. |
|  | The Inverter is heavy and can cause injury if not handled safely.  |  | Do not disassemble or alter the inverter in any way.   |
|  | Be careful when touching the inverter! It is an electrical product with risk of electric shock and heating.              |  | ONLY qualified personnel should install or perform maintenance work on the units.  |
|  | Do not place near open fire or incinerate. Do not use near heaters or hot temperature sources.                           |  | Warranty Void if Seal is Broken.   |
|  | Do not stand on.   |  | Keep the product out of reach of children!   |
|  | Do not step or put any objects onto the inverter.  |  | Avoid unsuitable shoes for installing and operating the inverter.  |
|  | Protective Conductor Terminal or Earth Ground Terminal.  |  | Do not drop, deform, or impact the inverter.   |
|  | Single Phase.  |  | Three Phase.   |
|  | Do not submerge the inverter in water or expose it to moisture or liquid.  |  | Keep out of reach of children, animals, and insects.   |

|  |  |
|--|--|
|  <p>Do not expose the product to sunlight.</p>  |  <p>Inverter DC to AC.</p>  |
|  <p>Max. PV input current.</p>   |  <p>Net Weight in Kilograms.</p>  |
|  <p><b>BATTERY INPUT</b><br/>Battery Discharge Voltage, Battery Discharge Current, Input Voltage Type, Battery Discharge Power.</p>   |  <p><b>PV INPUT</b><br/>PV Input Voltage, Number of MPPT's, MPPT Input Current &amp; Max PV ISC.</p>  |
|  <p>Direct Current.</p>   |  <p>Indicates that this product is recyclable.</p>  |
|  <p><b>AC OUTPUT</b><br/>Output Voltage, Input Voltage Type, AC Output Rated Current, Max AC Current, Output Frequency, Max AC ISC, Power Factor &amp; AC Output Rated Power.</p> |  <p><b>CONTINUOUS OUTPUT CURRENT</b><br/>Maximum Continuous Output Current, Output Frequency and Voltage, &amp; AUX (programmable AC output on battery SOC).</p>  |
|  <p>Charging.</p>  |  <p>Discharging.</p>   |
|  <p>Follow the indicated temperatures.</p>  |  <p><b>TEMPERATURE</b><br/>Ambient, Min &amp; Max.</p>  |
|  <p><b>MANUAL DOWNLOAD</b><br/>Download the latest version of the instruction manual by scanning the QR code.</p>   |  <p><b>WARRANTY REGISTRATION</b><br/>Scan the QR code to access our website and sign up for the manufacturer's warranty.</p>  |
|  <p>Do not dispose the device, accessories, and packaging with regular waste. Follow local ordinances or contact the manufacturer for disposal guidance.</p>                    |  <p>Refer to the operating instructions. Contact the supplier within 24 hours if there is anything wrong. In case of leakage contact with eyes or skin, immediately clean with water and seek help from a doctor.</p> |
|  <p>CE mark is attached to the solar inverter to verify that the unit follows the provisions of the European Low Voltage and EMC Directives.</p>                                |  |

## Product Disposal

### DO NOT dispose of this product with domestic waste!

Electrical devices should be disposed of in accordance with regional directives on electronic and / or electronic-waste disposal. In case of further questions, please consult your supplier. In some cases, the supplier can take care of disposal.

# PRODUCT INTRODUCTION

---

The Lynks 6kW is a highly efficient power management solution that helps users achieve 'parity' targets by optimizing power flow from multiple sources such as solar, mains power (grid), and generators. It intelligently manages the distribution of power based on demand, ensuring effective use of available energy when needed by the utilities.

## INTERACTIVE

- Easy and simple to understand LCD display.
- Supporting Wi-Fi or GSM monitoring.
- Built-in MPPT trackers.
- Smart settable 3-stage MPPT charging for optimised battery performance.

## COMPATIBLE

- Compatible with main electrical grid voltages.
- 230V single-phase, pure sine wave inverter.

## CONFIGURABLE

- Fully programmable controller.
- Programmable supply priority for battery or grid.
- Programmable multiple operation modes: on-grid / off-grid & UPS.
- Configurable battery charging - current / voltage based on the application.

## SECURE

- Overload / over-temperature / short-circuit protection.
- Smart battery charger design for optimized battery protection.
- Limiting function installed to prevent excess power overflow to grid.

## APPLICATIONS

- Power shedding (home / office / factory).
- UPS (Uninterrupted Power Supply).
- Remote locations with solar.
- Building sites.
- Telecommunication.

# BOX CONTENTS


---

### This box contains:

- Lynks 6kW (main unit)
- Screw pack
- CT Coil (2 pin AERO - female connector)
- 2 x MC4 connectors
- Wall mounting bracket
- Data logger (Sunsynk Wi-Fi)
- 1x3 pin AC Load connector (female)
- 1x3 pin AC Grid connector (male)
- 2x Battery Connectors

# TECHNICAL SPECIFICATION

- Pure sine wave inverter with a maximum input power of 8kW.
- MPPT charge controller feature.
- Bi-directional inverter that can rapidly charge external external batteries.

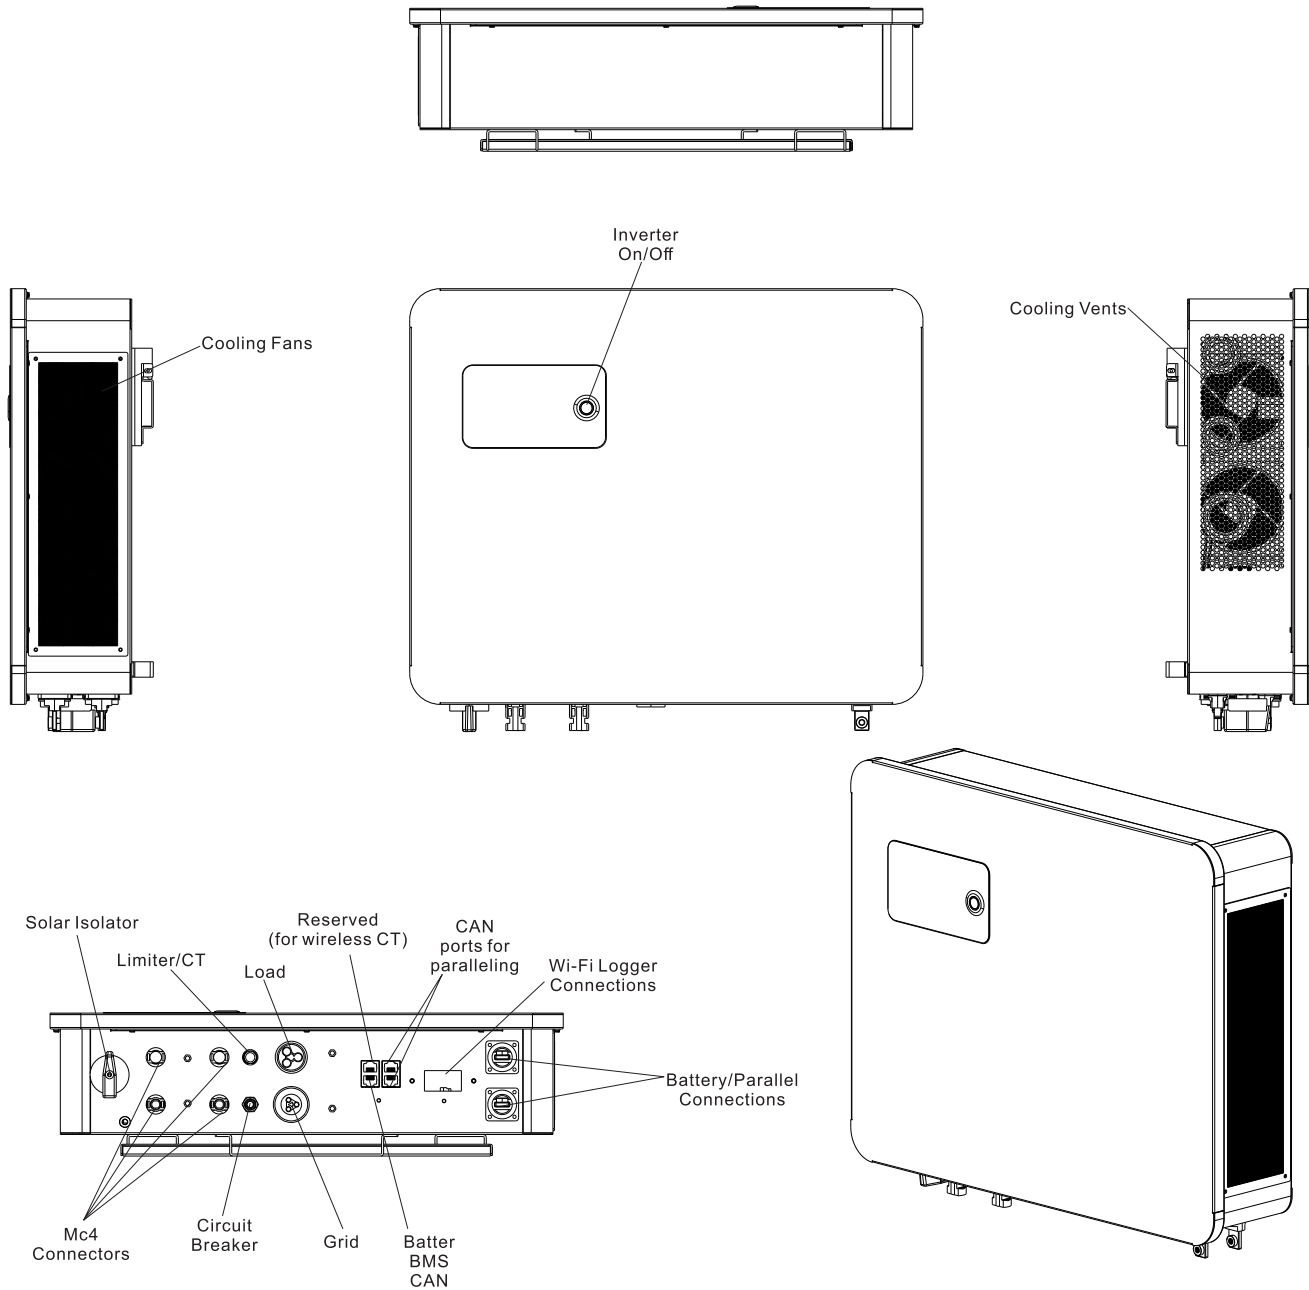

| <b>Model</b>   | <b>Lynks 6kW</b>                                |
|--|---|
| <b>Battery Input Parameters</b>  |   |
| Supported Battery Type   | Li-Ion or Lead-acid                             |
| Nominal Battery Voltage  | 48V   |
| Battery Input Voltage Range  | 40~60V  |
| Max. Charge Voltage  | ≤60V (Configurable)                             |
| Max. Charge Current  | 120A (Configurable)                             |
| Max. Discharge Current   | 130A (Configurable)                             |
| Battery Capacity (Recommended)   | 100~2000Ah                                      |
| Charge for Li-Ion Battery Pack   | Communicating with BMS of Battery Pack          |
| <b>PV String Input Parameters</b>  |   |
| Max. DC Input Power  | 8000W   |
| DC Input Voltage   | 500V  |
| MPPT Voltage Range   | 120-450V  |
| Start-up Voltage   | 150V  |
| Max. Input Current   | 15A x 2 = 30A (2 MPPT Channels)                 |
| <b>AC Output Parameters (Back-Up)(Feed to Essential Load)</b>  |   |
| Max. Output Power  | 6000W   |
| Max. Output Apparent Power   | 6000VA  |
| Peak Output Apparent Power   | 12000VA   |
| Max. Output Current  | 26A   |
| Nominal Output Voltage   | 220/230/240Vac Single-Phase (Configurable)      |
| Nominal Output Frequency   | 50/60Hz (+/-0.2%) (Configurable)                |
| Max. Bypass Current  | 40A   |
| Shift Time (Bypass and Inverter)   | 10ms  |
| Output THDv (Resistor Load)  | <3%   |
| <b>AC Input Parameter (On-Grid)(Bypass to Essential Load &amp; Charge the Battery/Feed to Home Load)</b> |   |
| Max. Input Power   | 6000W   |
| Max. Output Power (Feed to Home Load)  | 6000W   |
| Max. Apparent Input Power  | 6000VA  |
| Max. Apparent Output Power   | 6000VA  |
| Nominal Input/Output Voltage   | 220/230/240Vac (Auto Adjusted to Fit Home Grid) |
| Nominal Input/Output Frequency   | 50/60Hz (Auto Adjusted to Fit Home Grid)        |
| Max. Bypass Current  | 40A   |
| Shift Time (Bypass and Inverter)   | 10ms  |
| <b>Efficiency</b>  |   |
| Max. Efficiency  | 97.6%   |
| Max. Battery to Load Efficiency  | 94.0%   |
| Europe Efficiency  | 97.6%   |
| MPPT Efficiency  | 99.9%   |



## Protection

Integrated


Battery Over-Charge Protection, Battery Low-Voltage Protection, Over-Temperature Protection, Output Over-load Protection, Output Short Circuit Protection

## General Information

|                             |                                |
|-----------------------------|--------------------------------|
| Operating Temperature Range | -20°C ~ +50°C (>35°C Derating) |
| Protection Degree           | IP41                           |
| Net Dimension               | 514x420x140 mm                 |
| Gross Dimension             | 590x520x210 mm                 |
| Net Weight                  | 15.5kg                         |
| Gross Weight                | 19kg                           |

## INSTALLATION

### Selecting the Mounting Area

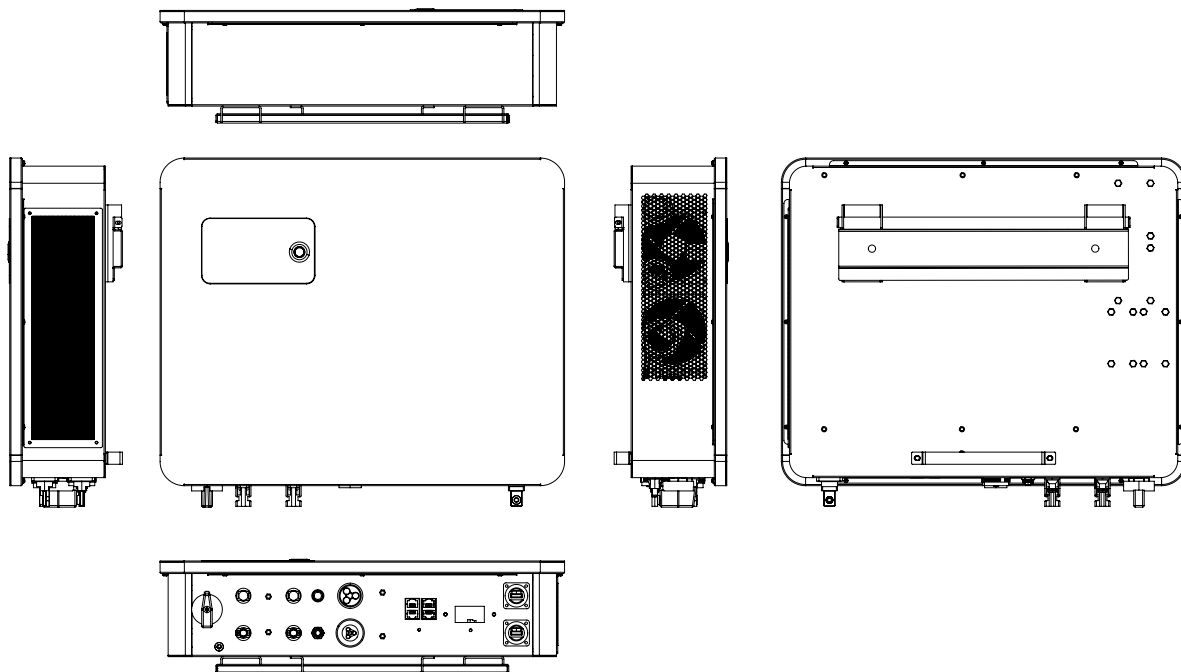

#### DO NOT install in the following areas:

- Areas with high salt content, such as the marine environment. It will deteriorate the metal parts and possibly lead to water / dampness penetrating the unit.
- Areas filled with mineral oil or containing splashed oil or steam such as in kitchens. This will deteriorate plastic parts of the unit, causing those parts to fail or allow water /damp to penetrate the unit.
- Areas that generate substances that adversely affect the equipment, such as sulphuric gas, chlorine gas, acid, or alkali. These can cause the copper pipes and brazed joints to corrode and fail to conduct electricity reliably.
- Areas that can cause combustible gas to leak, which contains suspended carbon-fibre, flammable dust or volatile inflammability such as paint thinner or gasoline.
- Areas where there may be gas leaks and where gas may settle around the unit, as this is a fire risk.


- Areas where animals may urinate on the unit or ammonia may be generated.
- High altitude areas (over 4000 metres above sea level).
- Environments where precipitation or humidity are above 95%.
- Areas where the air circulation is too low.

#### ALSO CONSIDER:

- Installing the indoor unit, outdoor unit, power supply cable, transmission cable and remote control cable at least 1 metre away from any television or radio receiver. This will prevent TV reception interference or radio noise. This will also prevent radio signal interference from external units that might interfere with the Wi-Fi or GSM monitoring.
- If children may approach the unit, take preventive measures so that they cannot reach and touch the unit.
- Install the indoor unit on the wall where the height from the floor is higher than 1600mm.
- For proper heat dissipation, allow a clearance of approximately 500mm to the side, 500mm above and below the unit and 1000mm to the front of the unit.

## Mounting the Inverter

- Select a location that provides adequate support for the weight of the inverter.
- Install this inverter so that the LCD screen is eye-level for easy operation.
- An appropriate ambient temperature lies between  $-20 \sim 50^{\circ}\text{C}$  for optimal operation. Battery charging temperature range lies between  $0^{\circ}\text{C} \sim 50^{\circ}\text{C}$ .
- Ensure other objects and surfaces are outside of the recommended spaces (500mm each side / above and below / front) to guarantee heat dissipation and easy access to the wiring / cabling.

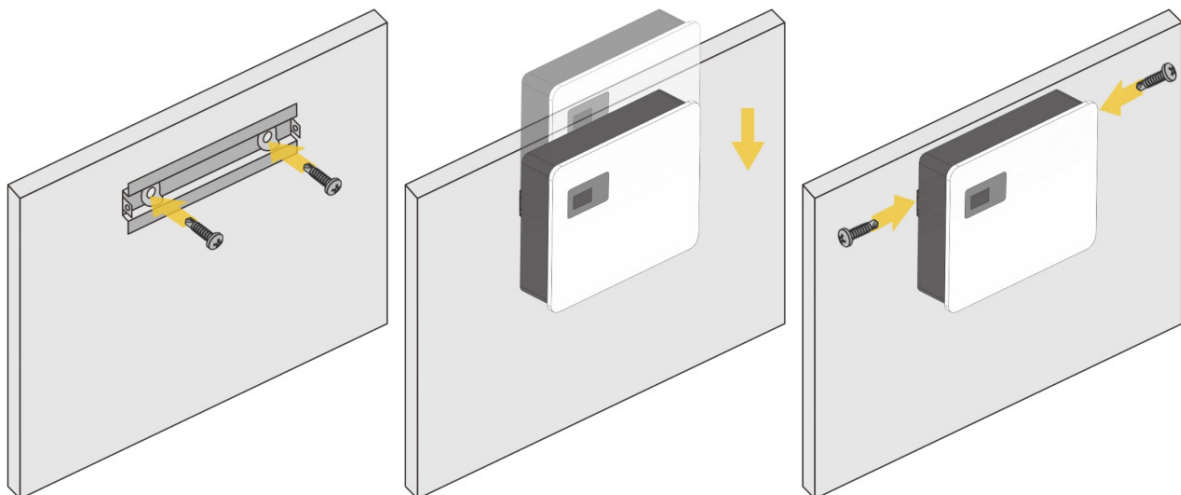


### CAUTION


#### Risk of Injury (Heavy Object)

Remember that this inverter is heavy, so users must be careful in handling the unit during installation especially when mounting or removing from a wall.

# Battery Cable Connection

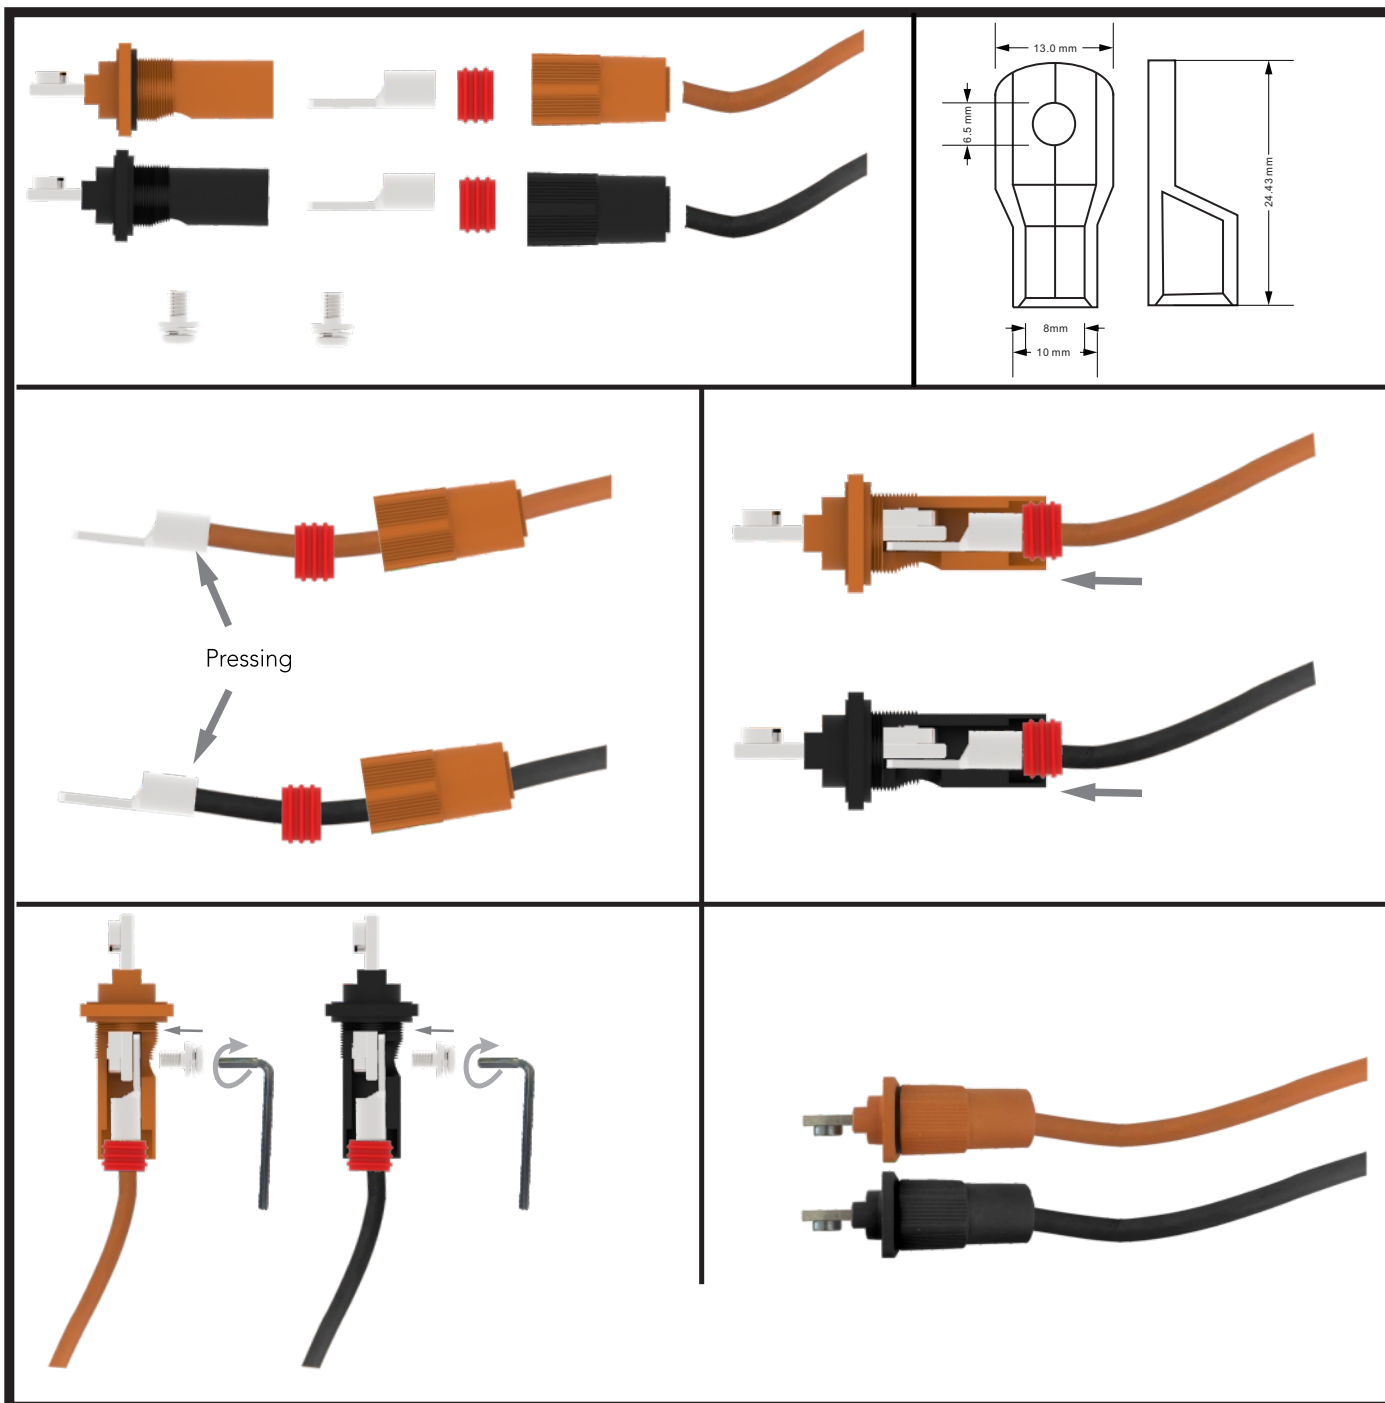

## Flow Diagram

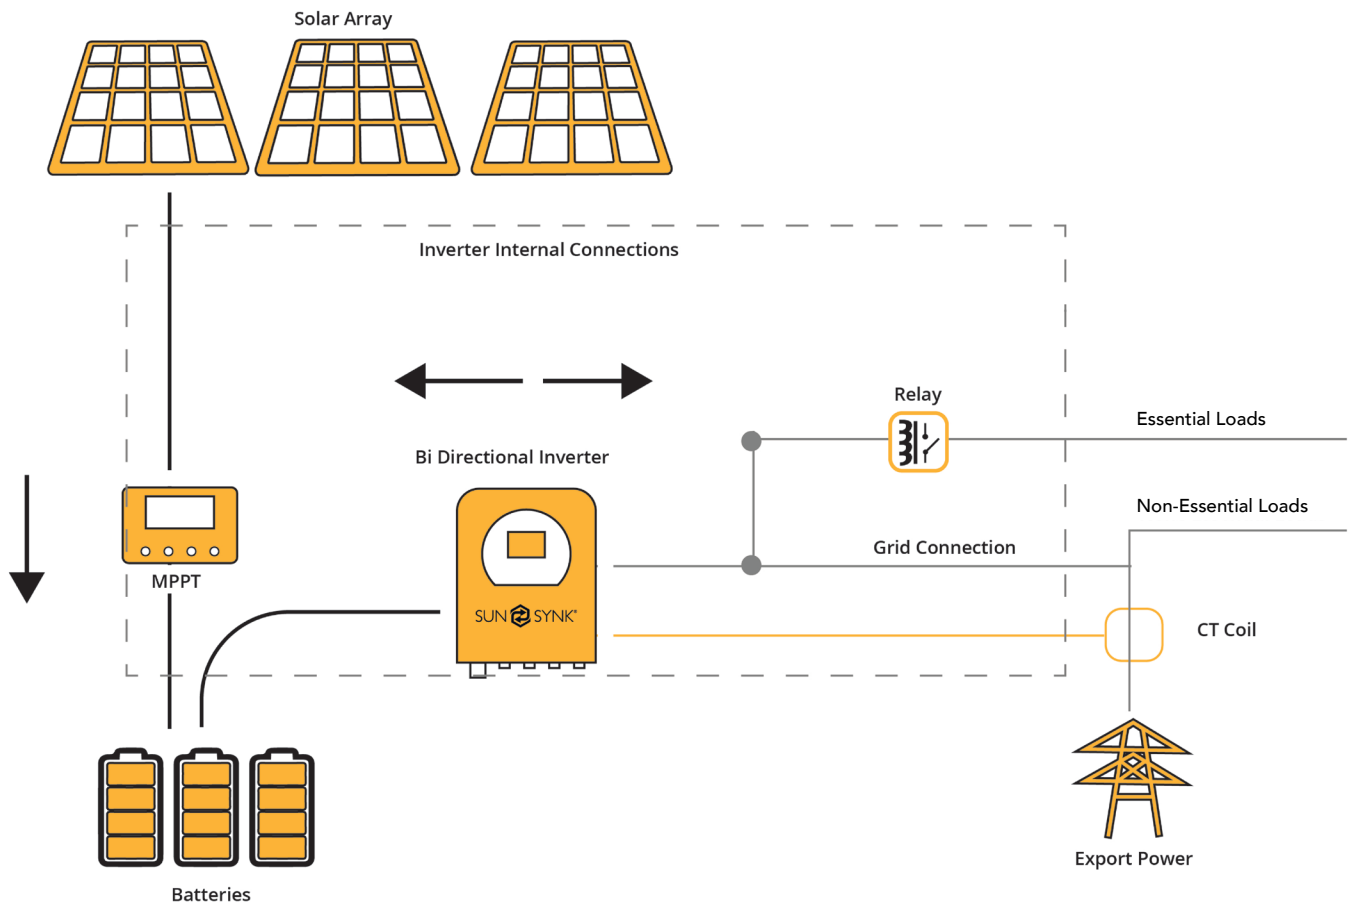

## Connecting to the Mains / Grid

1. Connect the Lynks 6kW Hybrid Inverter to the electrical grid via the *grid ports*, using a suitable RCD and a 30A fuse on the consumer board.
2. Now, connect only the essential loads to the *load ports* (output) to a secondary consumer board, considering the maximum limit of 6 kW.
3. Ensure the main consumer unit and the secondary consumer unit are correctly grounded to the Lynks 6kW.

## Wiring the PV Panels


- The Lynks 6kW has two MPPT controllers with a maximum input current of 30A (2 x 15A).
- Before connecting to PV modules, install a separate DC circuit breaker between the inverter and PV array.
- To avoid any malfunction, **DO NOT** connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter.
- Also, the open-circuit voltage (Voc) of the PV modules does not exceed the maximum input voltage of the inverter. Also, the Voc of the PV array should be higher than the minimum starting voltage of the inverter.
- Connect the PV panels into the MC4 connectors.

# CT Coil and Load Power Settings


The CT coil is one of the most important parts of the Lynks 6kW. This device reduces the power of the inverter to prevent feeding power to the grid. This is also known as zero export.

- Fit the coil (sensor) around the live cable on the main fuse feeding the building and run the cable back to the inverter. This cable can be extended up to an extra 10m using a similar cable.
- Connect the other end of the CT coil into the inverter terminals marked as *CT coil*.

Fit around positive cable feeding the building BETWEEN the meter and main fuse.

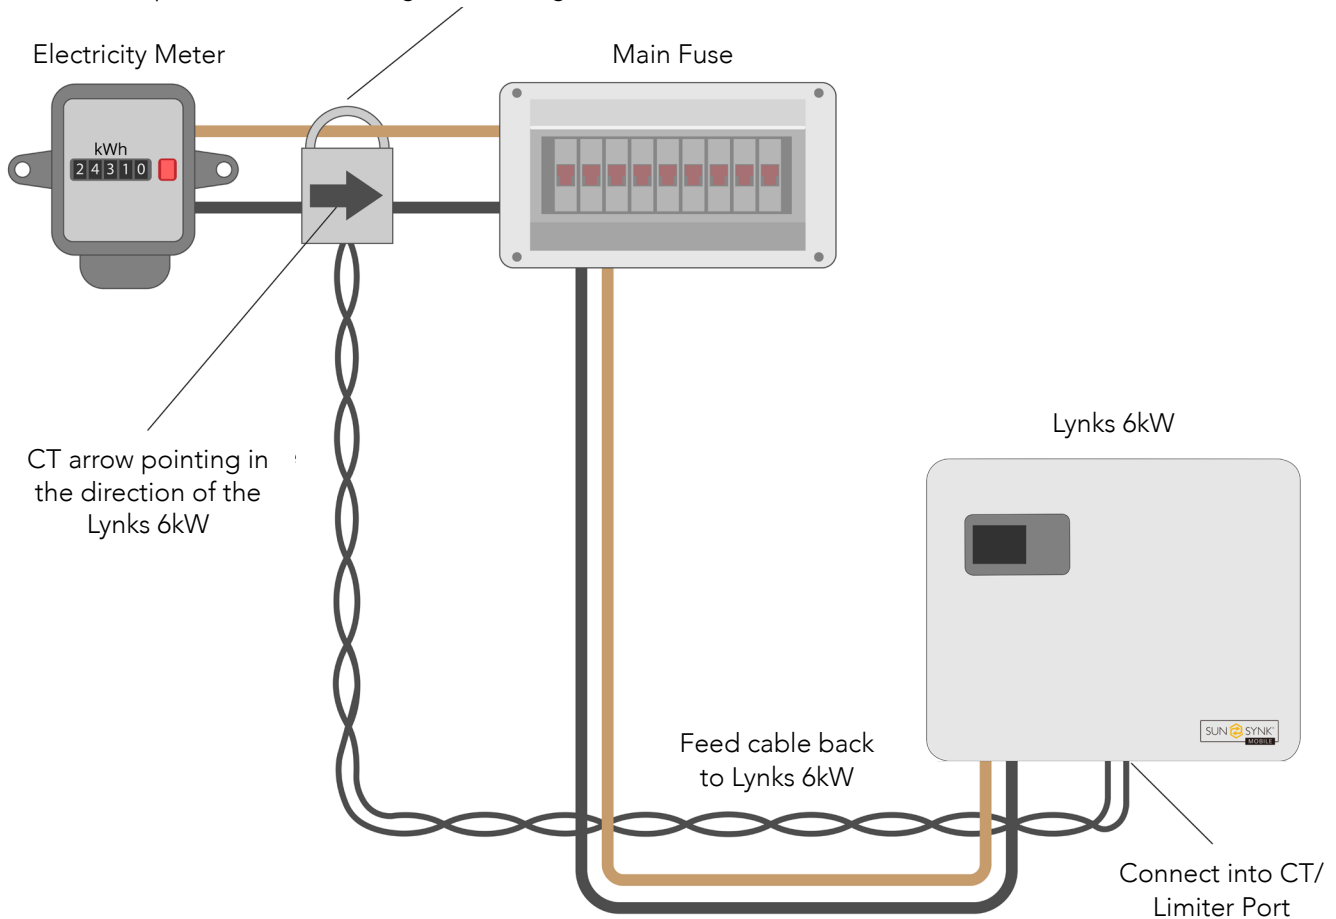


You can access the *CT Coil Screen* directly from the *Home Screen* by pressing the Home/Back button:

| SUN  SYNK  |                      |                 |
|---|----------------------|-----------------|
| CT Power  | Essential Load Power | Home Load Power |
| <b>30W</b>  | <b>1000W</b>         | <b>4800W</b>    |
| Work Mode: Standalone<br>Input Trickle Feed: 30W<br>Export Control: Zero Export<br>Earth Neutral Bond: Enable<br>Night Power Saving: Enable |                      |                 |

You can access the External Battery Pack page by pressing the Home/Back button again:

SN: XXXXXXXXXX

**SUN  SYNK**

---

**External Battery Pack**

|                                |               |
|--------------------------------|---------------|
| Capacity: 100Ah                | SOC: 65%      |
| Voltage: 53.4V                 | Current: 30A  |
| Charge Voltage Limit: 57.6V    |               |
| Discharge Voltage Limit: 45.0V |               |
| Charge Current Limit: 50A      |               |
| Discharge Current Limit: 100A  |               |
| Temp: 31.2°C                   | Alarm: 0x0000 |

## Parallel Operation

In order to connect Lynks 6kW inverters to operate in parallel, you need to set up the work mode configuration for each the inverter. Basically, you have to set which inverter will be the master and which will be the slaves, and then make the connections described in section External Battery and Parallel Connections.

**Basic Settings**

|               |            |
|---------------|------------|
| Set Time      | 15:16      |
| Set Date      | 19-05-2023 |
| Backlight     | On         |
| Work Mode     | Master     |
| SOC/Voltage   | Voltage    |
| Factory Reset | No         |

**Basic Settings**

|               |            |
|---------------|------------|
| Set Time      | 15:16      |
| Set Date      | 19-05-2023 |
| Backlight     | On         |
| Work Mode     | Slave 02   |
| SOC/Voltage   | Voltage    |
| Factory Reset | No         |




### WARNING

To ensure the proper functioning of the parallel operation, it is important first to establish the work mode for both the Master and Slave inverters and then make the necessary wiring connections.


If you make the connection prior to changing the work mode, an F15 error will be displayed on the Fault Codes page. In the event of this error, please maintain the connection and proceed to the settings to modify the work mode as presented above, and wait approximately 3-4 minutes. After that, the device should return to its normal working condition, with the error cleared.

# External Battery and Parallel Connections


Inverter Unit: 1 External Battery Number: 1

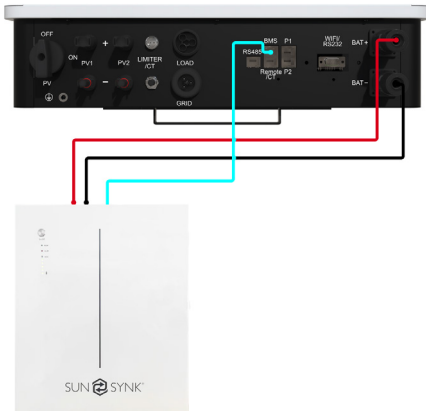


Inverter Unit: 1 External Battery Number: 2

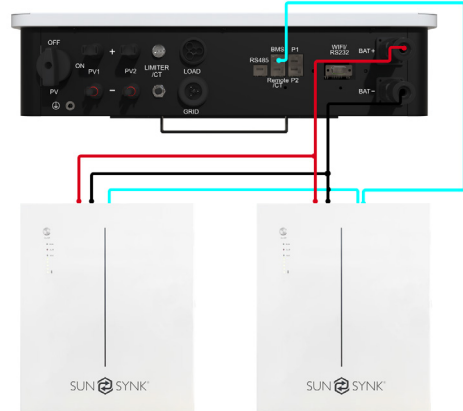


Inverter Unit: 2 External Battery Number: 1

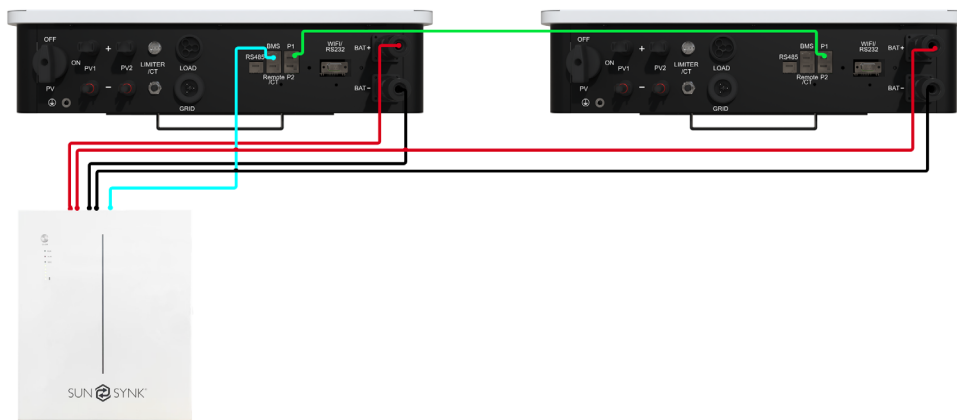


Inverter Unit: 2 External Battery Number: 2

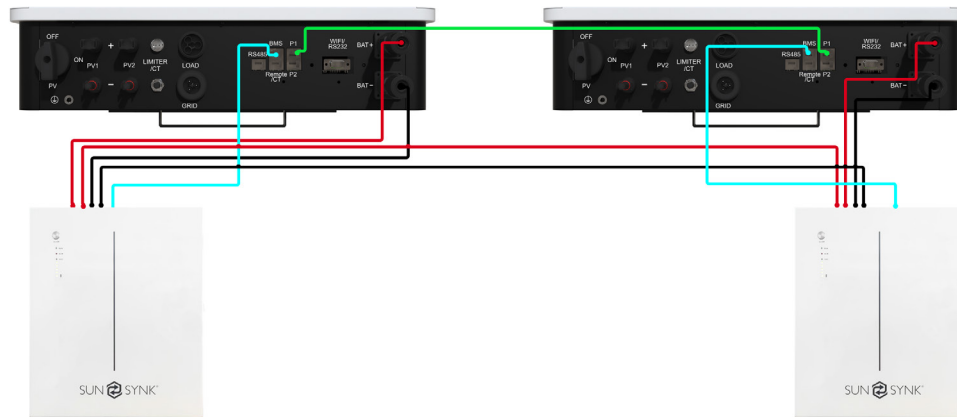

Inverter Unit: 3 External Battery Number: 1

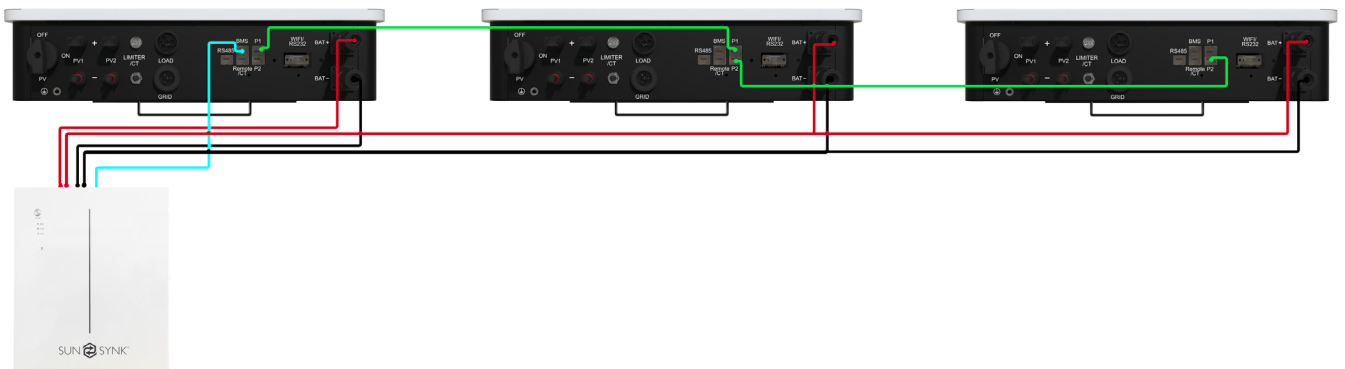


Inverter Unit: 3 External Battery Number: 2

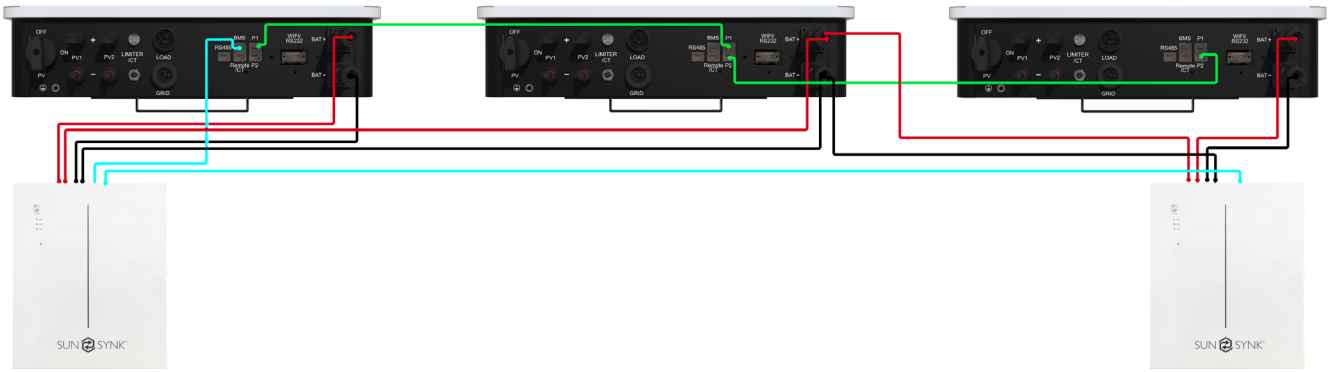


Inverter Unit: 2 External Battery Number: 1  
(Shows CT Coil Connection + Master&Slave)

**Master**


**Slave**

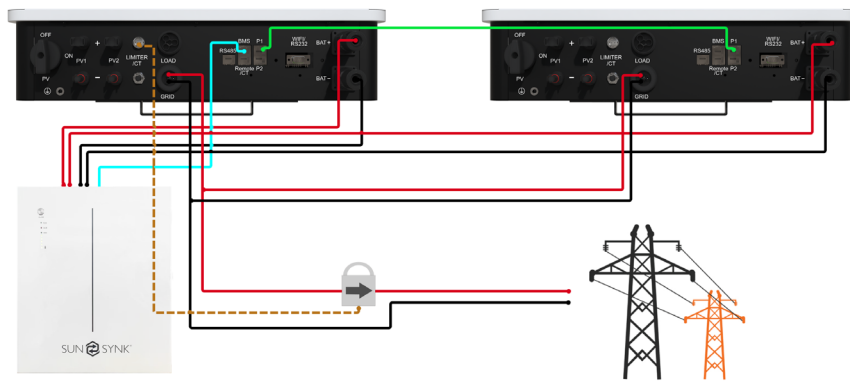

Inverter Unit: 2 External Battery Number: 2  
(Shows Batteries connected in parallel)

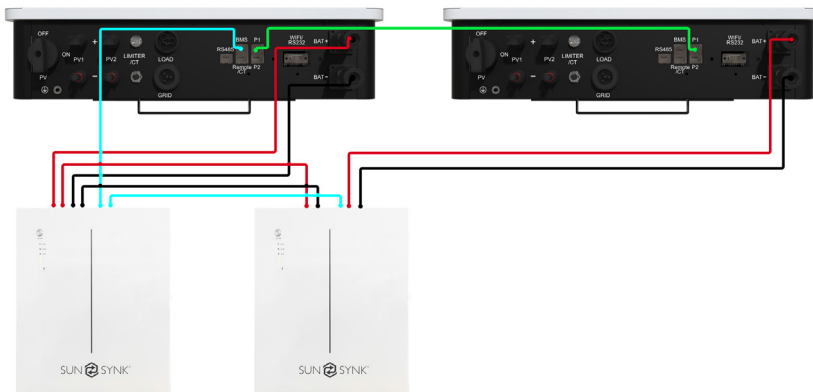


Inverter Unit: 3 External Battery Number: 6  
(Show External Batteries can be installed into each inverter)

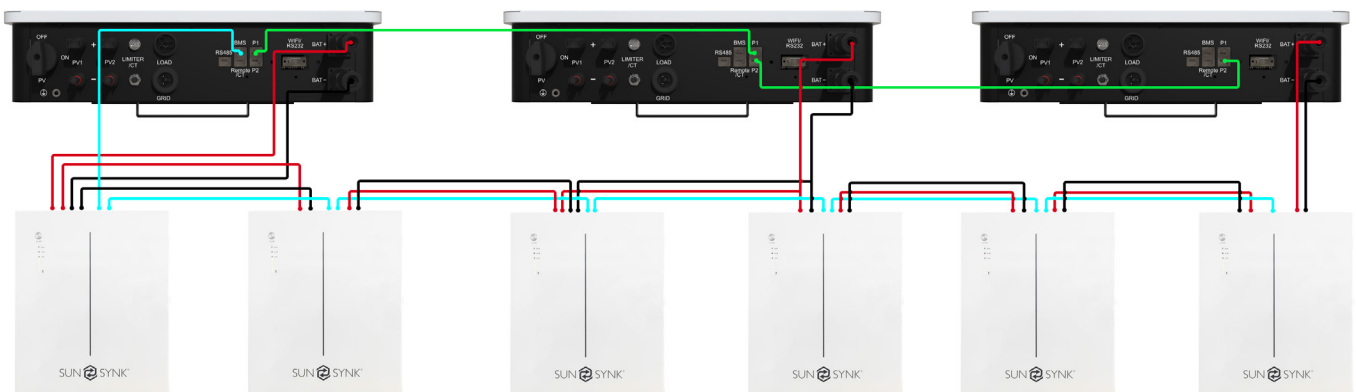





# Load Connection

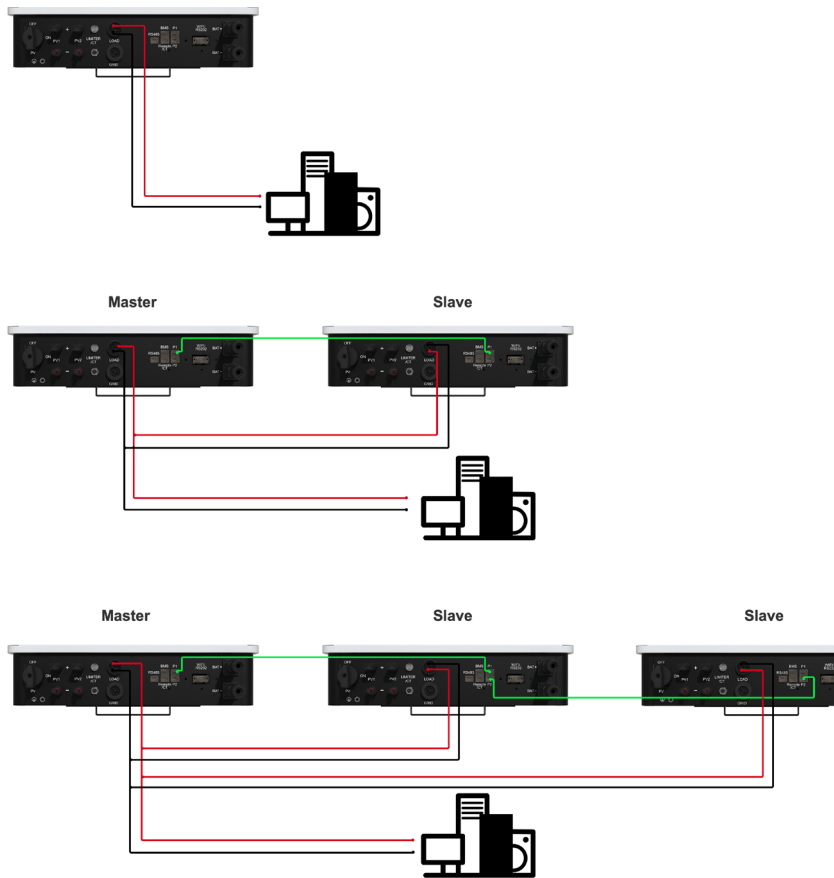

# Grid Connection

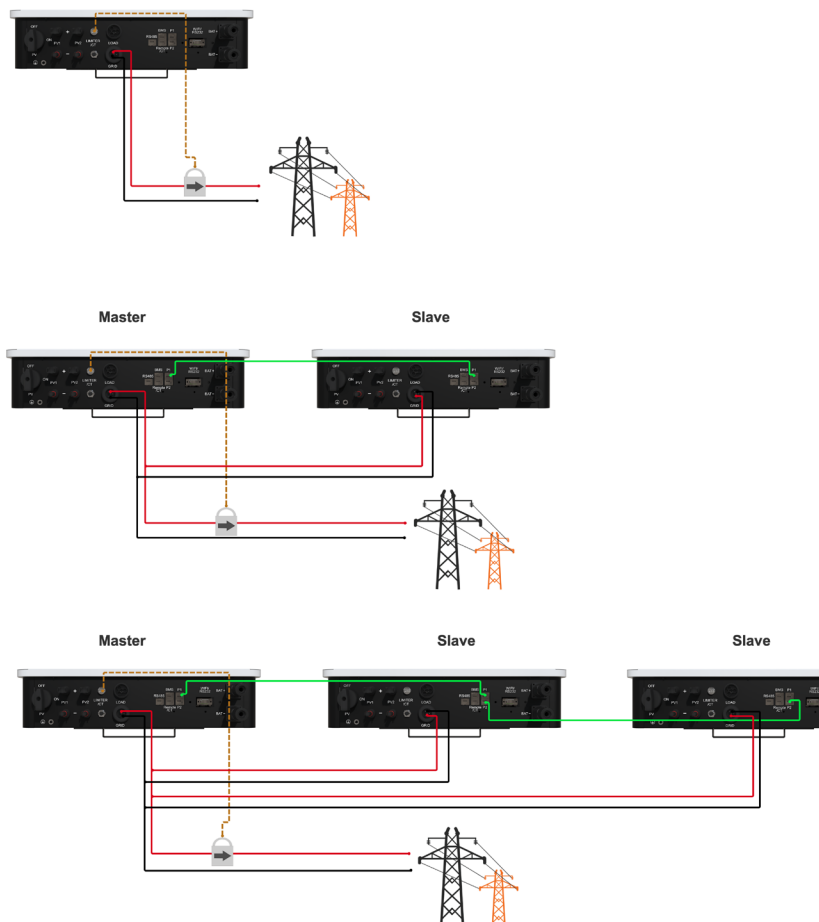


# Solar Connection

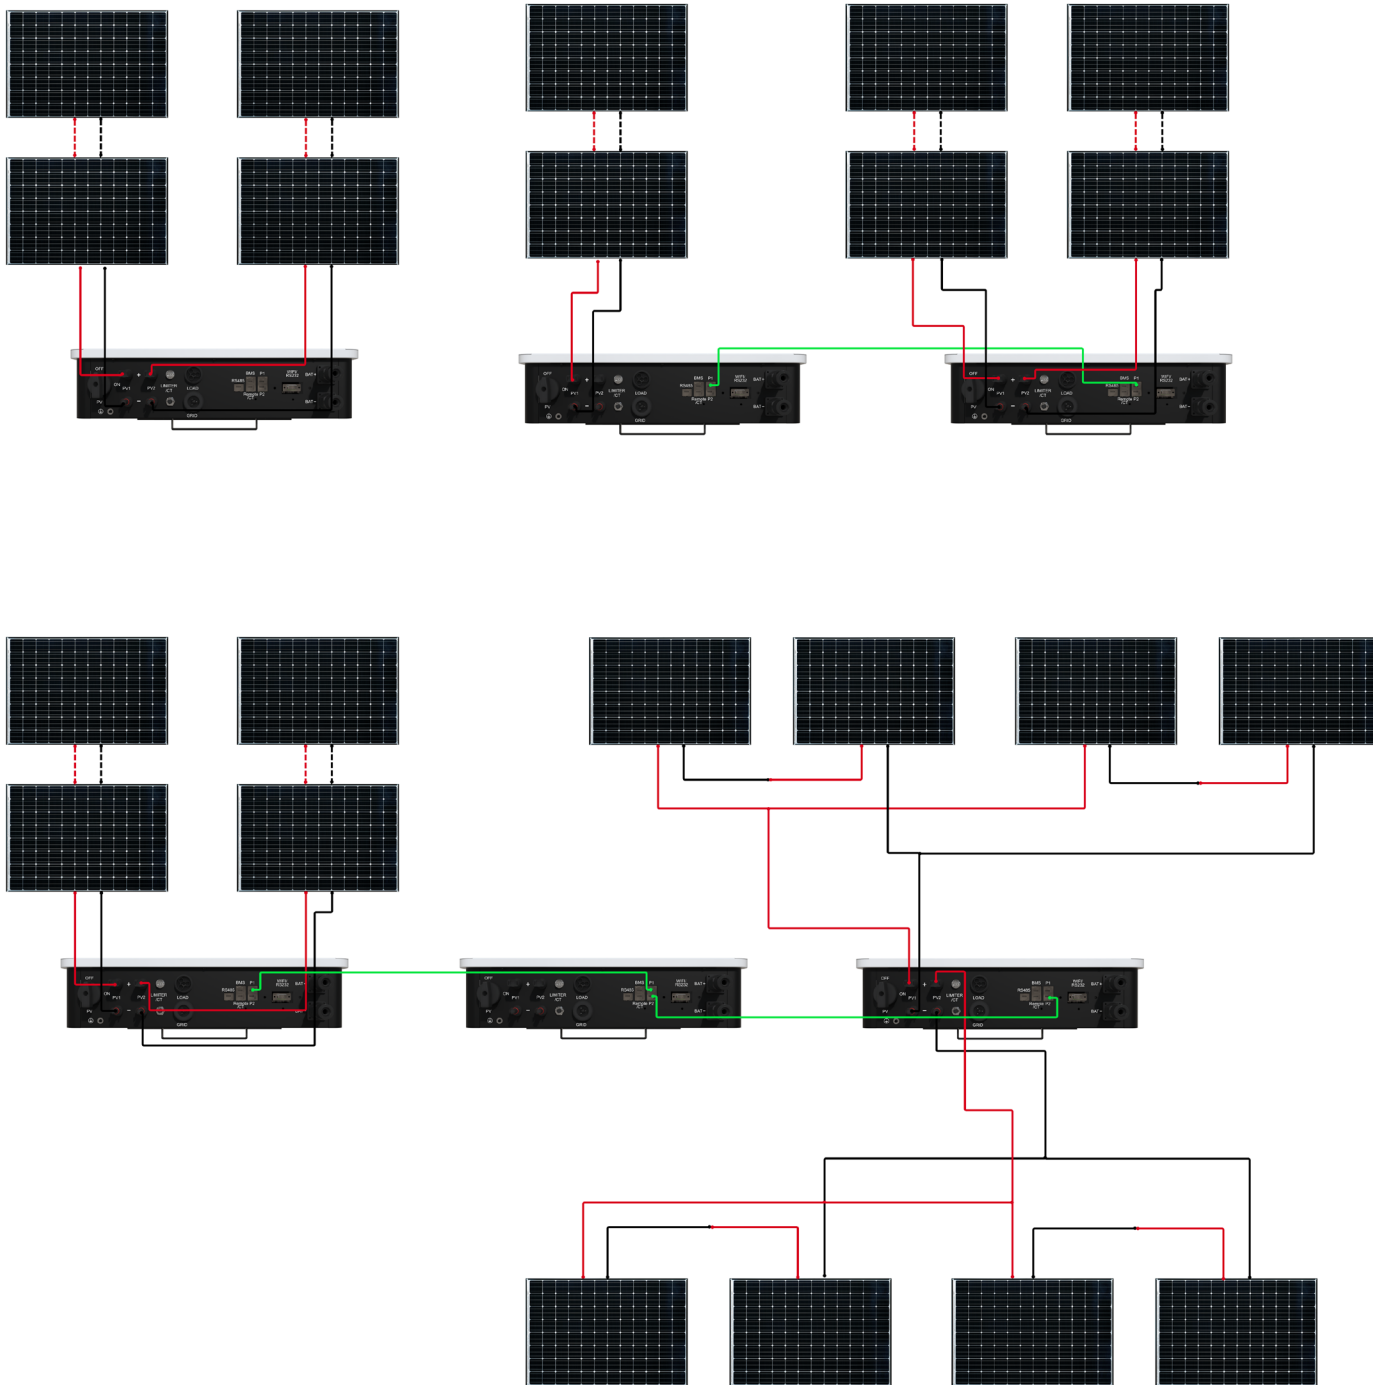

# LCD DISPLAY SCREEN

The LCD display screen is situated on the front of the Lynks 6kW, this is where you can control and operate the system.

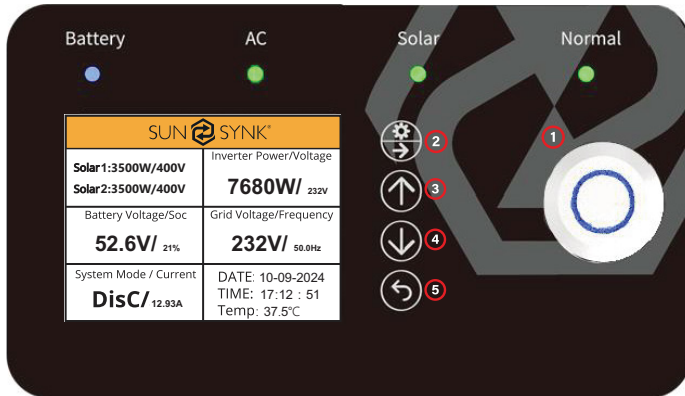

1. **Power** - to turn the system on / off.
2. **Settings / Select** - to operate the settings menu & to select.
3. **Up** - to navigate up.
4. **Down** - to navigate down.
5. **Home / Back** - to go back to the home menu & to navigate backwards.

| TYPE    | INDICATION | DESCRIPTION          |
|---------|------------|----------------------|
| BATTERY | GREEN      | CHARGING             |
|         | BLUE       | DISCHARGING          |
| AC      | GREEN      | AC CONNECTED         |
|         | OFF        | AC OFF               |
| SOLAR   | GREEN      | SOLAR ON             |
|         | OFF        | SOLAR OFF            |
| NORMAL  | GREEN      | INVERTER RUNNING     |
|         | RED        | SYSTEM FAULT         |
|         | OFF        | INVERTER NOT RUNNING |

## FACTORY SETTINGS

| Battery Settings       | Default Setting |
|------------------------|-----------------|
| Low Battery Cut Off    | 45.0V           |
| Reboot Voltage         | 50.0V           |
| Maximum Charge Current | 50A             |
| Charge from MAIN       | YES             |
| Float Charge Voltage   | 56.0V           |
| Active                 | ON              |

| System Configuration      | Default Setting |
|---------------------------|-----------------|
| Maximum Discharge Current | 100A            |
| Maximum Battery Voltage   | 56.0V           |
| Import Trickle Feed       | 30W             |
| Export Control            | Zero Export     |
| Earth Neutral Bond        | Enable          |
| Night Power Saving        | Enable          |

| Grid Settings          | Default Setting |
|------------------------|-----------------|
| Maximum Grid Voltage   | 253V            |
| Minimum Grid Voltage   | 195.5V          |
| Maximum Grid Frequency | 52.0Hz          |
| Minimum Grid Frequency | 47.5Hz          |

| System Controller |       |       | Default Setting |   |
|-------------------|-------|-------|-----------------|---|
| 00:00             | 6:00  | 3000W | 52.0V           | Y |
| 6:00              | 12:00 | 3000W | 52.0V           | Y |
| 12:00             | 18:00 | 3000W | 52.0V           | Y |
| 18:00             | 23:59 | 3000W | 52.0V           | Y |


## BATTERY COMPATIBILITY

The following batteries are compatible with Sunsynk Mobile Lynks Inverter:

- SUN-BATT-5.32
- SUNSYNK-L5.3
- L051069-A

# OPERATION


## System Flow

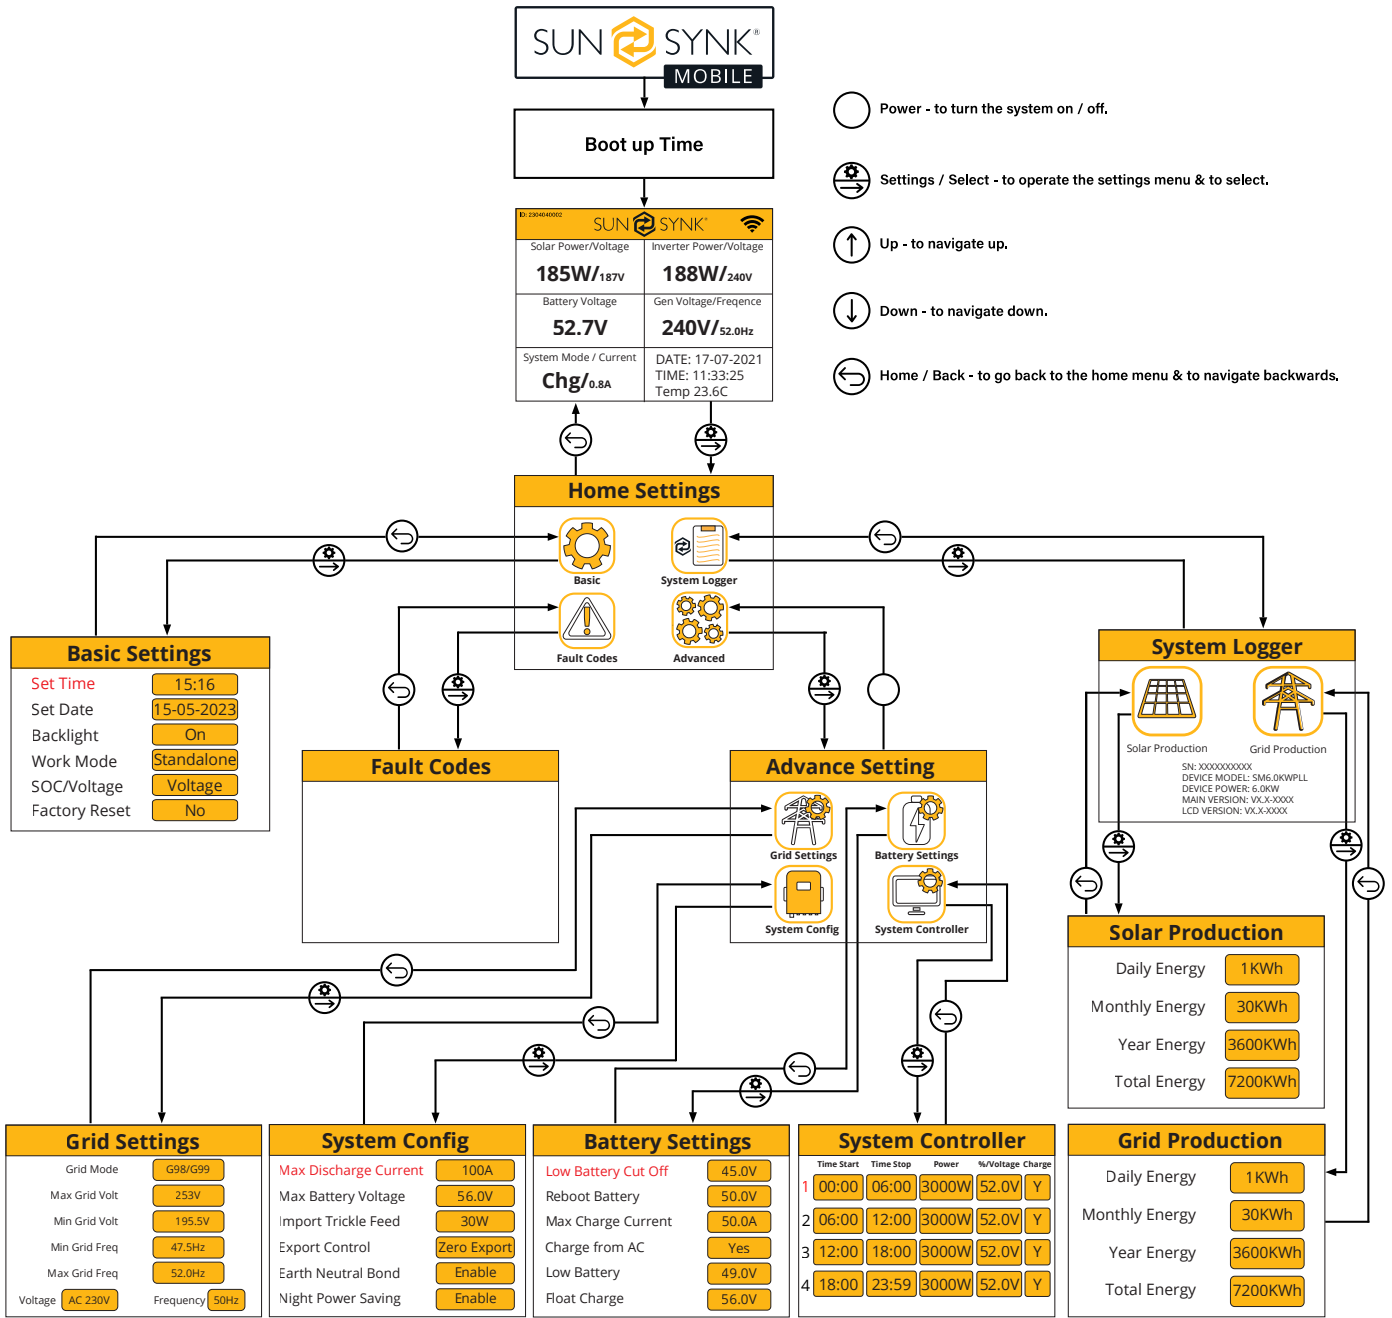

## Switching On / Off

Once the inverter has been correctly installed and the batteries are connected, press the *on / off button* (located on the front of the case) to turn on the system.

## Home Screen

| SUN  SYNK® |  |
|---|--|
| Solar 1:3500W/400V<br>Solar 2:3500W/400V  | Inverter Power/Voltage<br><b>7680W/</b> 232V         |
| Battery Voltage/Soc<br><b>52.6V/</b> 21%  | Grid Voltage/Frequency<br><b>232V/</b> 50.0Hz        |
| System Mode / Current<br><b>DisC/</b> 12.93A  | DATE: 10-09-2024<br>TIME: 17:12 : 51<br>Temp: 37.5°C |

### What does this page display?

Solar MPPT Input Power 1&2

Battery Voltage

System Status

Inverter Current Power

Grid Voltage and Frequency

Date / Time


### What you can do from this page

If you press the select button you can navigate to the *basic setup menu*

If Sunsynk Connect has been connected, the WI-FI icon appears

Access the CT screen by pressing the Home/Back button

# Home Settings

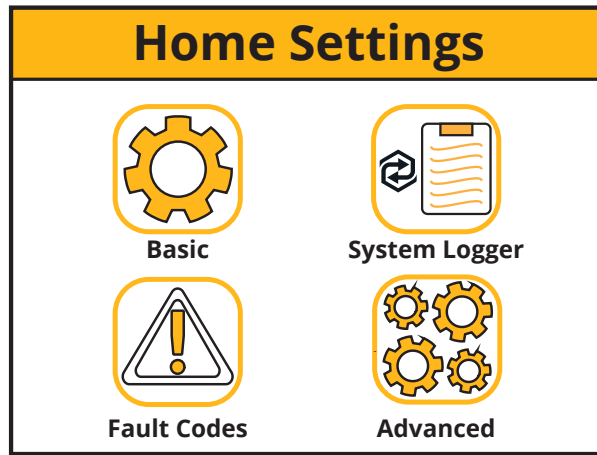



**What does this page display?**

- \_\_\_\_\_ Basic setting icon
- \_\_\_\_\_ System logger icon
- \_\_\_\_\_ Fault codes icon
- \_\_\_\_\_ Advanced settings icon
- \_\_\_\_\_ Language settings icon

**What you can do from this page**

You can navigate through the functions by clicking on each icon

## Basic Settings

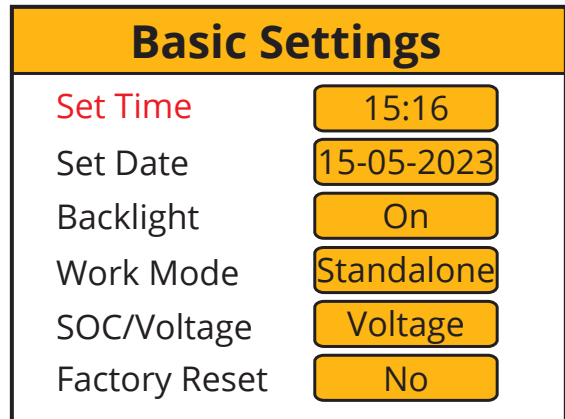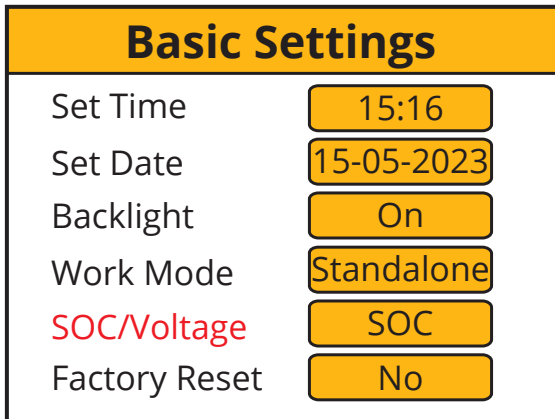

**What does this page display?**

- \_\_\_\_\_ Time
- \_\_\_\_\_ Date
- \_\_\_\_\_ Backlight on / off
- \_\_\_\_\_ Work Mode
- \_\_\_\_\_ SOC/Voltage
- \_\_\_\_\_ Reset

### What you can do from this page

Set the system's time

Set the system's date

Set backlight

Set the workmode

Set the system SOC/Voltage

Reset to factory default settings

After changing the settings, do not forget to click *save settings*.

## Basic Settings

Save Settings?

**YES** **NO**

## Language Settings

Change the language settings via the "Basic Settings" page by pressing the "Factory Reset" button. Then a password input page will be shown. The default password is "1234".

## Basic Settings

|               |            |
|---------------|------------|
| Set Time      | 15:16      |
| Set Date      | 15-05-2023 |
| Backlight     | On         |
| Work Mode     | Standalone |
| SOC/Voltage   | SOC        |
| Factory Reset | No         |

## SUN SYNK<sup>®</sup>

Please Input the Password

\*\*\*\*




Then select the language according to your country or region by swiping right.






## Grid Mode Settings

Change the language settings via the "Basic Settings" page by pressing the "Factory Reset" button. Then a password input page will be shown. The default password is "1234".

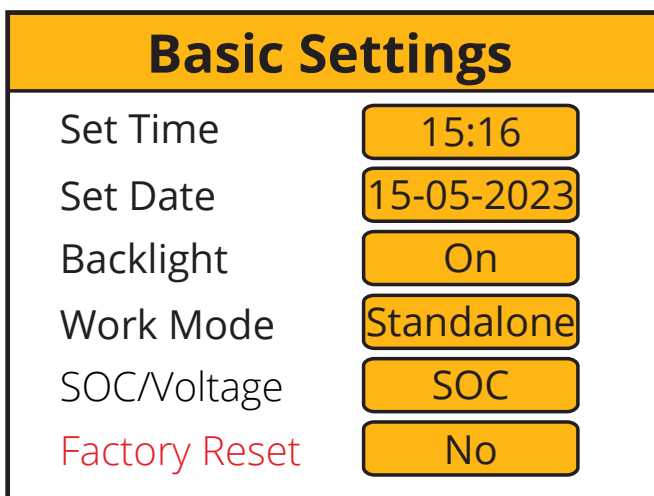


Then select the grid mode according to your region by swiping right.

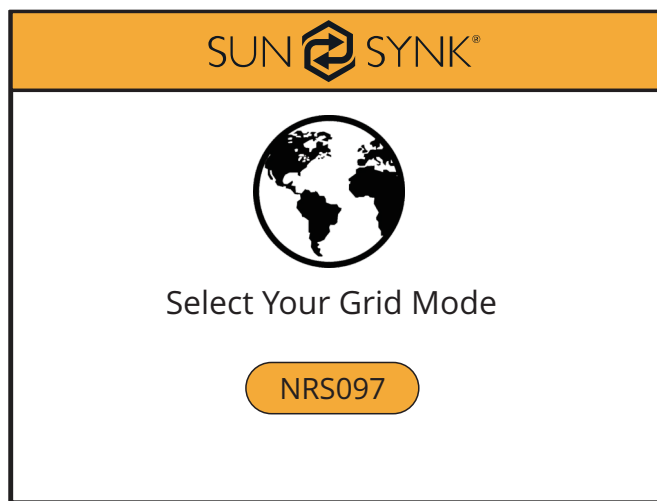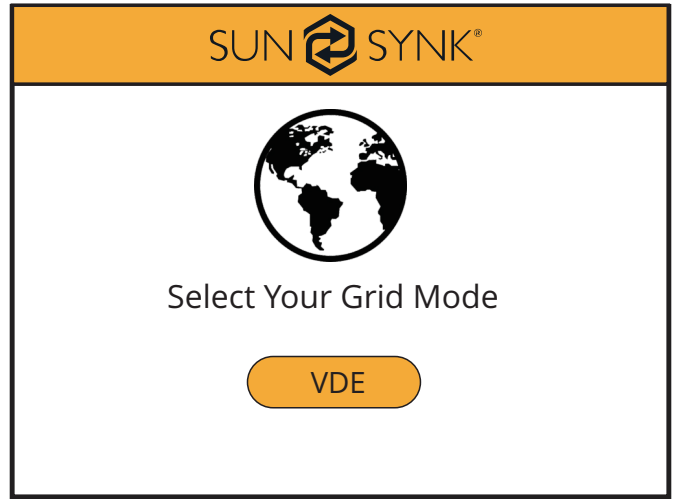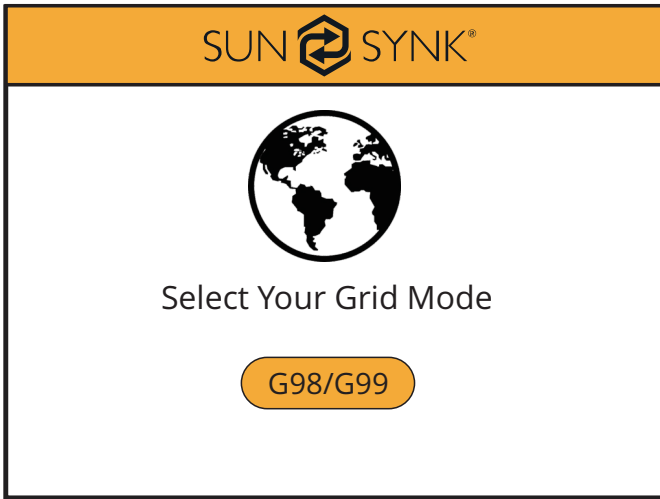


## Work Mode Settings

Change the work mode settings via the "Basic Settings" page by pressing the "Work Mode" button. Then a password input page will be shown. The default password is "1234".

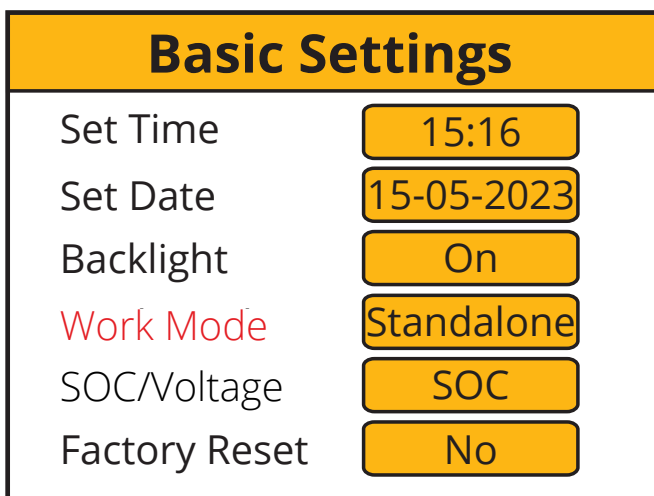

Then, the "Work Mode Settings" page will display.

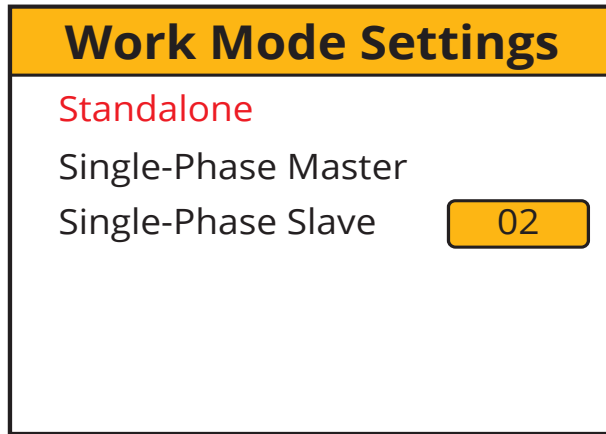

**What does this page display?**

The Work Mode selected


Single-Phase Master

Single-Phase Slave number

**What you can do from this page**

Change the number of Slave Inverters (maximum 15 slaves)

## System Logger

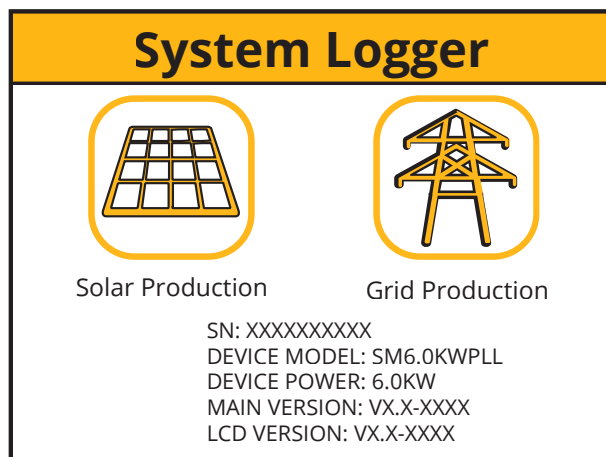

| Solar Production |         |
|------------------|---------|
| Daily Energy     | 1KWh    |
| Monthly Energy   | 30KWh   |
| Year Energy      | 3600KWh |
| Total Energy     | 7200KWh |

| Grid Production |         |
|-----------------|---------|
| Daily Energy    | 1KWh    |
| Monthly Energy  | 30KWh   |
| Year Energy     | 3600KWh |
| Total Energy    | 7200KWh |

**What does this page display?**

Solar production icon

Grid production icon

**What you can do from this page**

Daily solar energy produced

Monthly solar energy produced

Yearly solar energy produced

Total solar energy produced


Daily grid energy used

Monthly grid energy used

Yearly grid energy used

Total grid energy produced

**Advance Settings**

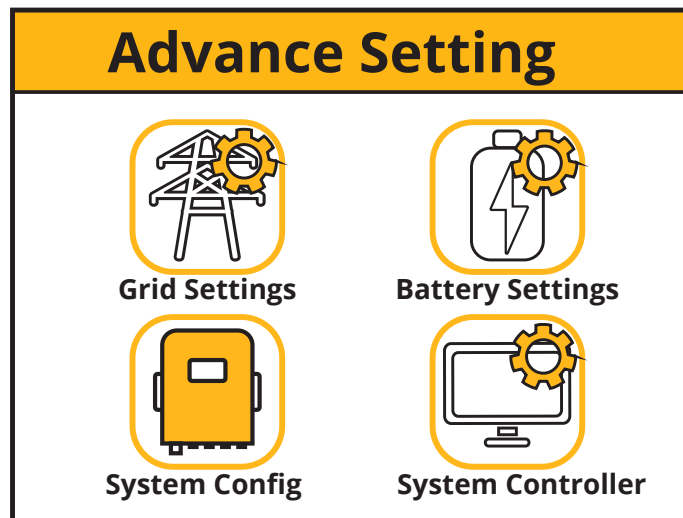

**What does this page display?**

Grid Settings page icon

System Configuration page icon

Battery Settings page icon

System Controller page icon

**What you can do from this page**

You can access the grid, system, inverter, and battery setting pages.

## Grid Settings

| Grid Settings |         |
|---------------|---------|
| Grid Mode     | NRS097  |
| Max Grid Volt | 253V    |
| Min Grid Volt | 195.5V  |
| Min Grid Freq | 47.5Hz  |
| Max Grid Freq | 52.0Hz  |
| Voltage       | AC 230V |
| Frequency     | 50Hz    |

### What does this page display?

Grid Mode

Maximum grid voltage allowed

Minimum grid voltage allowed

Minimum grid frequency

Maximum grid frequency

## Battery Settings

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 10%   |
| Reboot Battery      | 20%   |
| Max Charge Current  | 50A   |
| Charge from AC      | Yes   |
| Low Battery         | 15%   |
| Float Charge        | 56.0V |

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 50.0A |
| Charge from AC      | Yes   |
| Low Battery         | 49.0V |
| Float Charge        | 56.0V |

### What does this page display?

Low battery SOC/Voltage

Reboot SOC/Voltage

Maximum charge current

Charge from the mains

Low Battery SOC/Voltage

Float charge SOC/Voltage

### What you can do from this page

Set a *low voltage* cut-off for the batteries. Before setting this, please refer to the battery characteristics.

The *reboot voltage* is the voltage that the batteries must reach before the inverter switches on again.

*Maximum charge* is the maximum current that the system will provide to charge the batteries. This is normally rated at 0.5C, the battery's Ah (s) x 0.5. For example, if you have installed a 20Ah battery, then the maximum charge current should be set at 10A. The lower the setting, the longer the batteries will last.

If *charge from the mains* is set as *YES* the batteries will charge from the mains grid.

*Float charge voltage* must be set accordingly to the specifications of the battery used.

Set the Low Battery Voltage to set the point where Low power mode will take affect.

## PLEASE NOTE

If the Charge from AC is set to No, the battery cannot be charged from AC GRID. Otherwise, the battery can be charged from AC GRID.

## System Settings

| System Config         |             |
|-----------------------|-------------|
| Max Discharge Current | 100A        |
| Max Battery Voltage   | 56.0V       |
| Import Trickle Feed   | 30W         |
| Export Control        | Zero Export |
| Earth Neutral Bond    | Enable      |
| Night Power Saving    | Enable      |

### What does this page display?

Maximum discharge current

Maximum battery voltage

Input power to prevent export

Export Control

Earth bonding

Night Power Shaving

### What you can do from this page

Set the maximum discharge current from the batteries.

Set the maximum voltage the batteries should be charged to.

Set the "Import Trickle Feed" from GRID, minimum 20W.

Set the "Export Control". Could be "UPS", "Zero Export", and "Sell".

If Earth Neutral Bond is enabled, the relay will make and earth neutral bond on the load port of the inverter after the grid power fails. This is for earth leakage devices to function correctly on this island circuit.

The Night Power Saving can be set to "Enable" or "Disable".

# Export Control

The Export Control can be set as "UPS", "Zero Export" and "Sell".

## 1. "UPS"

When the "Export Control" is set to "UPS", the inverter will not export power to the home load via the "GRID" connector, just power the essential load that is connected to the "LOAD" connector. When the "Charge from Main" is set to "Yes", the battery can be charged from the main AC and PV, and the charge time period can be set via the "System Controller" page.

In the "System Controller" page, when the "charge" option is set to "N", the inverter will not be charged by the main AC from "Start Time" to "Stop Time" in this time period. When the "Charge" option is set to "Y", the battery will be charged by the main AC from "Start Time" to "Stop Time" to "Vol" setting value in this time period.

## 2. "Zero Export"

When the "Export Control" is set to "Zero Export", the inverter will export power to the home load via the "GRID" connector and power the essential load that connected to the "LOAD" connector at the same time. The export power to the home load will not exceed the total power of the home load, so there is no exceeded power feed out, this is called "Zero Export". A CT (Limit) must be connected to the inverter in this work mode.



## 3. "Sell"

When the "Export Control" is set to "Sell", the inverter will sell back any excess power produced by the solar panels to the grid. The power selling time and power settings are determined by "System Controller".

# Export Sell to Grid


1. Press the Settings button on the main screen.

2. Select Advanced Settings.

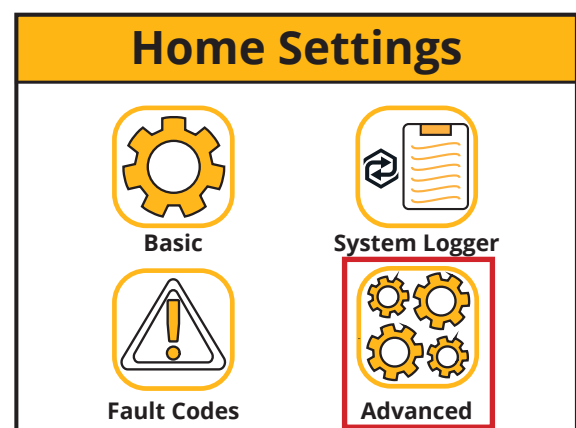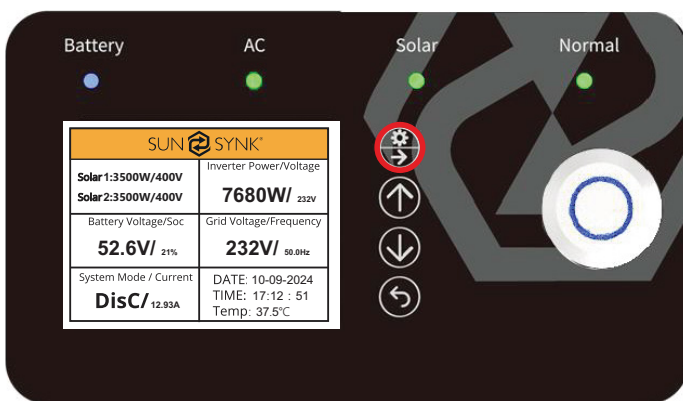


3. Select "System Config". In the "Export" option, you can select the "UPS", "Zero Export" and "Sell". If you want to sell electricity, choose "Sell".


### Advance Setting




**Grid Settings**



**Battery Settings**



**System Config**



**System Controller**

### System Config

|                       |   |
|-----------------------|---|
| Max Discharge Current | <input type="text" value="100A"/>                               |
| Max Battery Voltage   | <input type="text" value="56.0V"/>                              |
| Import Trickle Feed   | <input type="text" value="30W"/>                                |
| Export Control        | <input style="border: 2px solid red;" type="text" value="UPS"/> |
| Earth Neutral Bond    | <input type="text" value="Enable"/>                             |
| Night Power Saving    | <input type="text" value="Enable"/>                             |


### System Config

|                       |   |
|-----------------------|---|
| Max Discharge Current | <input type="text" value="100A"/>                                       |
| Max Battery Voltage   | <input type="text" value="56.0V"/>                                      |
| Import Trickle Feed   | <input type="text" value="30W"/>  |
| Export Control        | <input style="border: 2px solid red;" type="text" value="Zero Export"/> |
| Earth Neutral Bond    | <input type="text" value="Enable"/>                                     |
| Night Power Saving    | <input type="text" value="Enable"/>                                     |

### System Config


|                       |  |
|-----------------------|--|
| Max Discharge Current | <input type="text" value="100A"/>                                |
| Max Battery Voltage   | <input type="text" value="56.0V"/>                               |
| Import Trickle Feed   | <input type="text" value="30W"/>                                 |
| Export Control        | <input style="border: 2px solid red;" type="text" value="Sell"/> |
| Earth Neutral Bond    | <input type="text" value="Enable"/>                              |
| Night Power Saving    | <input type="text" value="Enable"/>                              |

Which operating mode the machine is working in is shown in the following screens:

SUN  SYNK


|            |                      |                 |
|------------|----------------------|-----------------|
| CT Power   | Essential Load Power | Home Load Power |
| <b>30W</b> | <b>1000W</b>         | <b>4800W</b>    |

Work Mode: Standalone  
 Input Trickle Feed: 30W  
 Export Control: UPS  
 Earth Neutral Bond: Enable  
 Night Power Saving: Enable

SUN  SYNK

|            |                      |                 |
|------------|----------------------|-----------------|
| CT Power   | Essential Load Power | Home Load Power |
| <b>30W</b> | <b>1000W</b>         | <b>4800W</b>    |

Work Mode: Standalone  
 Input Trickle Feed: 30W  
 Export Control: Zero Export  
 Earth Neutral Bond: Enable  
 Night Power Saving: Enable

SUN  SYNK

|            |                      |                 |
|------------|----------------------|-----------------|
| CT Power   | Essential Load Power | Home Load Power |
| <b>30W</b> | <b>1000W</b>         | <b>4800W</b>    |

Work Mode: Standalone  
 Input Trickle Feed: 30W  
 Export Control: Sell  
 Earth Neutral Bond: Enable  
 Night Power Saving: Enable



The power selling time and power settings are determined by the setting screen below.

| System Controller |            |           |       |                  |
|-------------------|------------|-----------|-------|------------------|
|                   | Time Start | Time Stop | Power | %/Voltage Charge |
| 1                 | 00:00      | 06:00     | 3000W | 52.0V Y          |
| 2                 | 06:00      | 12:00     | 3000W | 52.0V Y          |
| 3                 | 12:00      | 18:00     | 3000W | 52.0V Y          |
| 4                 | 18:00      | 23:59     | 3000W | 52.0V Y          |

## PLEASE NOTE

This would only allow users to control the amount of power sold from the power stored in the pack. Any power from the PV above a set voltage or SOC is sold to the grid.

## Charge From Main

The Charge from Main can be set to "Yes" or "No". When it is set to "Yes", the inverter can be charged by the main AC and PV. When it be set to "No", the inverter will just can be charged by PV, and can't be charged by the main AC.

Charge from AC

Charge from AC

When the "Charge from Main" is set to "Yes", the inverter can be charged from the main AC and PV, and the charge time period can be set via the "System Controller" page.

In the "System Controller" page, when the "charge" option is set to "N", the inverter will not be charged by the main AC from "Start Time" to "Stop Time" in this time period. When the "Charge" option is set to "Y", the inverter will be charged by the main AC from "Start Time" to "Stop Time" till to the "Vol" setting value in this time period.

## Earth Neutral Bond

The Earth Neutral Bond can be set to "Enable" or "Disable". When is set to "Enable", this will provide the earth is connected to GRID earth when GRID has power. When it is set to "Disable", this function will not be available.

Earth Neutral Bond

Earth Neutral Bond

## Night Power Saving

The Night Power Saving can be set to "Enable" or "Disable". When is set to "Enable", the Night Power Saving function will be available. When it is set to "Disable", this function will not be available.

### PLEASE NOTE

**"Night Power Saving" just can work when the "Charge from AC" is set to "No" and there is no PV power input.**

The Night Power Saving working mode is described as follow:

1. First, you need set the "Low Battery Voltage" value at the "Battery Settings" page of the LCD display.
2. Then you need to set the "Night Power Saving" time periods and the value of "Vol" on the "System Controller" page.

There are 4 time periods, the inverter will discharge the battery till the battery voltage is equal to the value set at "Vol" section, if the values set are smaller than the value that set at "Low Battery Voltage", when the battery voltage is equal to this value of "Low Battery Voltage", then the inverter will stop its DC to DC converting, and the essential load connected to the "LOAD" connector will just be powered by the main AC. Because the most standby power consumption of the inverter is caused by the inverter's DC to DC converting, so when the inverter stops its DC to DC converting, the standby power of the inverter will be much lower, this can save a lot of power consumption.

### PLEASE NOTE

**Please remember that when the inverter is working on the "Night Power Saving" state, when the main AC is off, the UPS function shift time will be longer, can't be immediate, it will take around 30 seconds.**

When there is PV power input, then the inverter's DC to DC converting will work again, because without this converting, the batter packs can't be charged.

# Setting Details

## 1. UPS Mode

This mode function is set, the inverter output is from the load only and will not export any power to the GRID even if it is connected. Set the Charge from AC by "Yes" and Export Control set by "UPS".

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 50.0A |
| Charge from AC      | Yes   |
| Low Battery         | 49.0V |
| Float Charge        | 56.0V |

| System Config         |        |
|-----------------------|--------|
| Max Discharge Current | 100A   |
| Max Battery Voltage   | 56.0V  |
| Import Trickle Feed   | 30W    |
| Export Control        | UPS    |
| Earth Neutral Bond    | Enable |
| Night Power Saving    | Enable |

Set the time to keep to charge the battery at the %voltage. If PV is not connected, suggest to set %voltage to 56V and set all time range to Y. Start to charge battery time by selecting the Charge Y or N

| System Controller |            |           |       |           |        |
|-------------------|------------|-----------|-------|-----------|--------|
|                   | Time Start | Time Stop | Power | %/Voltage | Charge |
| 1                 | 00:00      | 06:00     | 3000W | 100%      | Y      |
| 2                 | 06:00      | 12:00     | 3000W | 100%      | Y      |
| 3                 | 12:00      | 18:00     | 3000W | 100%      | Y      |
| 4                 | 18:00      | 23:59     | 3000W | 100%      | Y      |

## 2. Zero Export Mode

This mode function allows the inverter to export power to the home load via the "GRID" connector and power the essential load connected to the "LOAD" connector simultaneously. When zero export is ON, the inverter will export energy to the grid. The maximum power will not exceed the total load power of the grid.

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 50.0A |
| Charge from AC      | Yes   |
| Low Battery         | 49.0V |
| Float Charge        | 56.0V |

| System Config         |             |
|-----------------------|-------------|
| Max Discharge Current | 100A        |
| Max Battery Voltage   | 56.0V       |
| Import Trickle Feed   | 30W         |
| Export Control        | Zero Export |
| Earth Neutral Bond    | Enable      |
| Night Power Saving    | Enable      |

| System Controller |            |           |       |           |        |
|-------------------|------------|-----------|-------|-----------|--------|
|                   | Time Start | Time Stop | Power | %/Voltage | Charge |
| 1                 | 00:00      | 06:00     | 3000W | 52.0V     | Y      |
| 2                 | 06:00      | 12:00     | 3000W | 52.0V     | Y      |
| 3                 | 12:00      | 18:00     | 3000W | 52.0V     | Y      |
| 4                 | 18:00      | 23:59     | 3000W | 52.0V     | Y      |

### 3. Night Power Saving

When there is no PV, and the battery is not charged from AC, the output power will be to the load from the battery. When the battery level is equal to the battery set in the system control in that time period, and it is set to Y, then the inverter will run at a low power level from GRID to maintain the battery level is not dropped to shut down the inverter. The load power consumption will come from GRID. The setting will be as below.

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 50.0A |
| Charge from AC      | No    |
| Low Battery         | 47.0V |
| Float Charge        | 56.0V |


| System Config         |        |
|-----------------------|--------|
| Max Discharge Current | 100A   |
| Max Battery Voltage   | 56.0V  |
| Import Trickle Feed   | 30W    |
| Export Control        | Export |
| Earth Neutral Bond    | Enable |
| Night Power Saving    | Enable |

| System Controller |            |           |       |           |        |
|-------------------|------------|-----------|-------|-----------|--------|
|                   | Time Start | Time Stop | Power | %/Voltage | Charge |
| 1                 | 00:00      | 06:00     | 3000W | 47V       | Y      |
| 2                 | 06:00      | 12:00     | 3000W | 47V       | Y      |
| 3                 | 12:00      | 18:00     | 3000W | 47V       | Y      |
| 4                 | 18:00      | 23:59     | 3000W | 47V       | Y      |

If the low battery voltage is set higher, the %voltage will be placed higher accordingly.

# Fault Codes

To check fault codes, click on the *Fault Codes* icon on the *Home Settings* menu.

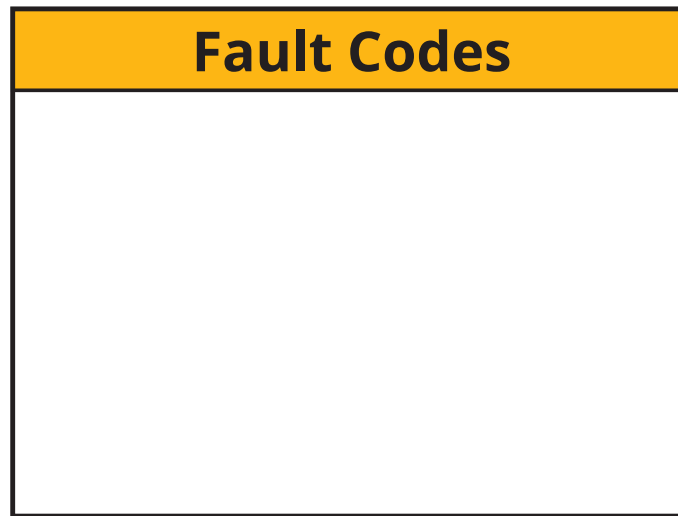

If any of the fault messages listed in the following table appear on your inverter and the fault has not been removed after restarting, please contact your local vendor or service centre. The following information is required:

1. Inverter serial number.
2. Distributor or service centre of the inverter.
3. On-grid power generation date.
4. The problem description (including the *fault code* and *indicator status* displayed on the LCD) is as detailed as possible.
5. Your contact information.

| Error Code | Display Error                            | Potential Method for Measurement and Fix   |
|------------|--|--|
| F07        | <b>DC/DC_Softstart_Fault</b>             | 1. Startup problems, replace the control board, if not, remove the motherboard to measure the MOS tube is in good condition.   |
| F10        | <b>AuxPowerBoard_Failure</b>             | 1. Power supply failure, update power board.   |
| F13        | <b>Working mode change</b>               | <b>Inverter work mode changed:</b><br>1. Reset the inverter.<br>2. Seek help from Sunsynk Mobile.  |
| F15        | <b>Short circuit protecting</b>          | <b>Short circuit fault:</b><br>1. Maintain the connection.<br>2. Proceed to the settings to modify the work mode.<br>3. Wait approximately 3-4 minutes.<br>4. The device should return to its normal working condition, with the error cleared.<br>5. Seek help from Sunsynk Mobile. |
| F18        | <b>AC over current fault or hardware</b> | <b>AC slide over current fault:</b><br>1. Check if the backup load power is within the range of the inverter.<br>2. Restart and check if it is normal.   |

| Error Code | Display Error                                   | Potential Method for Measurement and Fix  |
|------------|---|---|
| F20        | <b>DC over current fault of the hardware</b>    | <b>DC over current fault:</b><br>1. Check PV module and battery connections.<br>2. Reset the system.  |
| F23        | <b>AC leakage current is trans over current</b> | <b>Leakage current fault:</b><br>1. Check the PV module and inverter cables.<br>2. You may have a faulty PV panel (earth short).<br>3. Restart inverter.  |
| F24        | <b>DC insulation impedance failure</b>          | <b>PV isolation resistance is too low:</b><br>1. Check if the connection of PV panels and inverter are firmly connected.<br>2. Check if the earth bond cable on inverters is connected to the ground.   |
| F26        | <b>The bus bar is unbalanced</b>                | 1. Please wait 5 minutes to see if it returns to normal.<br>2. Fully reset the inverter.  |
| F29        | <b>ECAN communicate</b>                         | 1. When in parallel mode, check the parallel communication cable connection and hybrid communication address settings.<br>2. During the parallel system startup period, inverters will report F29. When all inverters are in ON status, it will disappear automatically;<br>3. If the fault exists, please contact us for help. |
| F30        | <b>Load current exceeding</b>                   | 1. Try to reduce the load power.<br>2. Seek help from Sunsynk Mobile.   |
| F34        | <b>Over Load Protection</b>                     | 1. Reduce appliance power on LOAD side (system will auto-reboot in 2 minutes).  |
| F35        | <b>No AC grid</b>                               | 1. Check if the inverter's connected to the <i>AC grid</i> .<br>2. Check if the RSCD had not tripped.<br>3. Check if the switch and fuses between the inverter and grid are all switched on.  |
| F37        | <b>Battery activation overcurrent</b>           | 1. System will auto-reboot in 2 minutes.  |
| F39        | <b>DC-DC over current</b>                       | 1. Push the power button of the inverter to restart it, system will auto-reboot in 2 minutes.   |
| F40        | <b>DC over current</b>                          | 1. If the battery SOC shows 0, turn off the unit and restart it   |
| F41        | <b>Parallel system stop</b>                     | 1. Check the hybrid inverter working status. If there's 1pcs hybrid inverter is in OFF status, the other hybrid inverters may report F41 fault in parallel system.<br>2. If the fault exists, please contact us for help.   |
| F42        | <b>AC line low voltage</b>                      | <b>Grid voltage fault:</b><br>1. Check if the voltage is in the range of standard voltage in specification, this can be adjusted via the grid set up page.<br>2. Check if grid cables are correctly connected.  |
| F45        | <b>AC line HIGH voltage</b>                     | 1. Grid exceeds 251V, and the inverter switch is off<br>2. Grid exceeds 251V, and the inverter switch is on, but the battery is drained   |

| Error Code | Display Error                             | Potential Method for Measurement and Fix   |
|------------|---|--|
| F47        | <b>AC over frequency</b>                  | <b>Grid voltage fault:</b><br><ol style="list-style-type: none"> <li>1. Check if the voltage is in the range of standard voltage in specification, this can be adjusted via the grid set up page.</li> <li>2. Check if grid cables are correctly connected.</li> </ol>   |
| F48        | <b>AC lower frequency</b>                 | <b>Grid frequency out of range:</b><br><ol style="list-style-type: none"> <li>1. Check if the frequency is in the range of specification.</li> <li>2. You may need to adjust the frequency on the grid set up page.</li> </ol>   |
| F55        | <b>DC busbar voltage is high</b>          | User: External Battery Input voltage is high<br><ol style="list-style-type: none"> <li>1. Installer: check inverter's bus voltage might be too high. Observe the battery voltage value on the LCD (the value will be restored automatically if it is normal), if it is not normal for a long period, you have to check the control board or the voltage acquisition part of the motherboard.</li> </ol>  |
| F56        | <b>DC bus bar voltage is too low</b>      | <b>Battery low voltage:</b><br><ol style="list-style-type: none"> <li>1. Check if the battery voltage is too low.</li> <li>2. If the battery voltage is too low use the PV or grid to charge the battery.</li> <li>3. Check the battery BMS.</li> </ol> <p><b>Important:</b> Especially with lithium batteries, ensure that the batteries Max. discharge current or power specification is the same or higher than the inverter specification.</p> |
| F60        | <b>Smoke alarm</b>                        | When the smoke alarm is lifted, use the App to restart the inverter (Refer to the relevant content of the App user manual).  |
| F61        | <b>Bus one shutdown</b>                   | <ol style="list-style-type: none"> <li>1. Reset the inverter.</li> <li>2. Seek help from Sunsynk Mobile.</li> </ol>  |
| F62        | <b>DRMs0 stop</b>                         | Reserved Error code  |
| F63        | <b>FAN Error</b>                          | <ol style="list-style-type: none"> <li>1. A technician needs to check the internal fan wire or replace fan.</li> <li>2. Seek help from Sunsynk Mobile.</li> </ol>  |
| F64        | <b>Heat sink high-temperature failure</b> | <b>Heat sink temperature is too high:</b><br><ol style="list-style-type: none"> <li>1. Check if the working environment temperature is too high.</li> <li>2. Turn off the inverter for 30 minutes and restart.</li> </ol>  |

## COMMISSIONING

### Startup / Shutdown Procedure

The inverter must be installed by a qualified / licensed electrical engineer in accordance to the countries wiring regulations.

Only after the engineer has completed the *earth bond*, RCD and earth leakage tests, check the solar panel Voc voltage (must not exceed 450V) and check the battery voltage. Then, the inverter can now be switched on.



### Power On Sequence:






1. Press the start button to on position.
2. Switch on AC.
3. Switch on the DC (PV isolator).

### Shutdown Sequence:

1. Switch off the PV isolator.
2. Switch off AC.
3. Press the start button to off position.

## Information for Commissioning the Inverter

After you have successfully powered up the inverter, the inverter must be programmed and set up as per the programming feature above.

|   |   |   |   |
|---|---|---|---|
|    | Check the <i>earth bond</i> on the solar panels.  | Check the Voc does not exceed 450V.   |   |
|  | Measure the supply voltage, check it matches the settings of the inverter.                                      | If it falls out of the setting range it will cause the inverter to shut down and alarm.   | See grid set up page.                                     |
|  | Check the battery charge and discharge is within the C rating of the battery. Too high will damage the battery. |   | Check the battery BMS is communicating with the inverter. |
|  | This is the heart of the system, this controls everything.  | Ensure you are familiar with this, if you fully understand the controller you will fully appreciate the capabilities of there inverter. |   |
|  | Familiarise yourself with common fault codes.   |   |   |

## GFDI Fault

Before the inverter starts to connect to the grid, the inverter will first detect the impedance of PV + to ground, and the impedance of PV – to ground. If any of these impedance values is less than 33k, the inverter will not connect to the grid and will report an error F24 on its LCD.

## MAINTENANCE

---

The inverter is low maintenance. However, it is important that at least twice a year (for dusty environments this may need to be carried out weekly) all the cooling fans and air ducts are cleaned and dust free.

Check if there are no fault codes and lithium battery communication is correct.

Weekly cleaning statement: suggest micromesh filters as an available option. Micro insects here are a real problem.

## APPENDIX A

---

If an external residual current device (RCD) is used, a device of type (A / AC, etc) should be employed, with a tripping current of 30mA or higher.

### Use of RCDs

Residual current devices (RCDs): An RCD dedicated for an IES may be used to meet the mechanical cable protection requirements and isolation requirements of BS 7671 for the cable from the switchboard to the IES. If an RCD is used, the RCD shall:

1. Disconnect all live conductors (including the actives and neutral).
2. Be of the type specified in the inverter manufacturer's instructions or as labelled on the inverter.

We recommend the use of an RCD on all circuits and sub circuits connected to the Sunsynk Mobile inverter. Residual current breaker with overcurrent protection (RCBO).

|  |               |
|--|---------------|
| <b>Earth-leakage protection class</b>      | Type A        |
| <b>Earth-leakage sensitivity</b>           | 30mA          |
| <b>Curve code</b>                          | C             |
| <b>Network type</b>                        | AC            |
| <b>Poles description</b>                   | 2P            |
| <b>Earth-leakage protection time delay</b> | Instantaneous |

For more information, training videos, software upgrades, help line or forum please refer to <http://www.sunsynkmobile.com> - Tech Support (Do not forget to register first on the website).



## Contact Us

---

**Call** +44 151 832 4300 **Email** [sales@sunsynkmobile.com](mailto:sales@sunsynkmobile.com) **Website:** [www.sunsynkmobile.com](http://www.sunsynkmobile.com)

**Address** **HK:** Room 702-704, 7/F Texwood Plaza, 6 How Ming Street, Kwun Tong, Kowloon, Hong Kong.

**UK:** Sunsynk UK Ltd, 17 Turnstone Business Park, Mulberry Avenue, Widnes, Cheshire, WA8 0WN.

**SA:** Unit 2, 3 & 4, 80 Highview Blvd, Ferndale, Randburg, 2160, South Africa.

**NL:** Sunsynk NL BV, Henri Wijnmalenweg 8, 5657 EP Eindhoven, Netherlands.

**AU:** Level 1, 982-988 Wellington Street, West Perth WA 6005, Australia.

**ES:** Tafetana, 32 P.I. Las Andoriñas 38639 Las Chafiras Santa Cruz de Tenerife.

**US:** 100 S. Ashley Drive, Suite 600, Tampa, Florida, 33602, United States of America.